


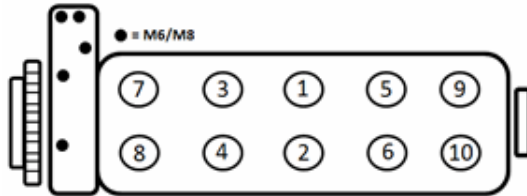
Anziehvorschrift für Zylinderkopf	172.891	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



233.370
M12x1,5x200



Anziehen/ Tightening/ Serrage/ Apriete	* B47 C20 50 Nm 70 Nm <input type="checkbox"/> 180° <input type="checkbox"/> 120° <input type="checkbox"/> 120° M8= 22 Nm	B47 D20 * 70 Nm <input type="checkbox"/> 180° <input type="checkbox"/> 120° <input type="checkbox"/> 120° M6= 10Nm
---	---	--

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
<input type="checkbox"/>	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

1995ccm³ 110-165 KW

Mot: B47

BMW: 1´F20/F21 2´F22/F23/F45/F46

3´F30/F31/F34 4´F32/F33/F36

5´F10/F11 Xx´F25/F26/F15

Mini: Mini F55/F56

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

172.891