
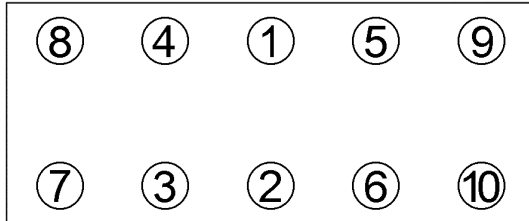


<b>Anziehvorschrift für Zylinderkopf</b>	<b>389.430</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Fiat/Iveco</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/	*	50 Nm
Tightening/		Pos. 1 - 6 100 Nm
Serrage/	➤	Pos. 1 - 6 90°
Apriete	➤	Pos. 7 - 10 60°
	➤	Pos. 1 - 6 90°
	➤	Pos. 7 - 10 60°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 1,10 mm

Ducato 11, Ducato 15, Ducato Maxi      04.2002>

Daily 29 L 10, 35 C/S 10, 50 C 12      05.2002>

Mot. F1AE0481, F1AE0481C

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*389.430\***