
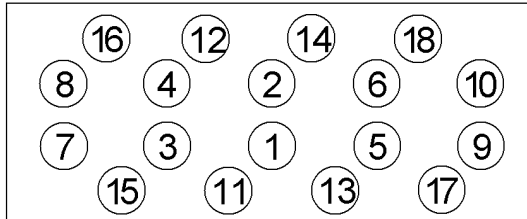


|                                                  |                                                         |                                                                                                   |
|--------------------------------------------------|---------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>Anziehvorschrift für Zylinderkopf</b>         | <b>818.910</b>                                          | <br>Das Original |
| <b>Tightening Instructions for Cylinder Head</b> |                                                         |                                                                                                   |
| <b>Instructions de serrage pour culasse</b>      |                                                         |                                                                                                   |
| <b>Prescripciones de apriete para culatas</b>    |                                                         |                                                                                                   |
|                                                  | passend für / suitable for<br>adaptable à / adaptable a | <b>Ford</b>                                                                                       |

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



|             |   |             |              |
|-------------|---|-------------|--------------|
| Anziehen/   | * | 1-10= 10 Nm | 11-18= 5 Nm  |
| Tightening/ |   | 1-10= 20 Nm | 11-18= 10 Nm |
| Serrage/    |   | 1-10= 40 Nm | 11-18= 20 Nm |
| Apriete     | ➤ | 1-10= 180°  | 11-18= 180°  |

Zeichenerklärung / Explanations / Explication / Explicacion

|   |                                             |                              |                                |                                       |
|---|---------------------------------------------|------------------------------|--------------------------------|---------------------------------------|
| * | neue Zylinderkopfschrauben verwenden        | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
| ★ | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
| □ | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
| ➤ | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

✚:1,10 mm ; Ø:86 mm