



## 1 Interface (en\*)



## 2 Assembly (en\*)



## 3 Disassembly (en\*)



\*↘



**BOSCH****1 Interface (en\*)**

<b>bg</b>	Място за монтаж
<b>cs</b>	Rozhraní
<b>da</b>	Viskerarm type
<b>de</b>	Schnittstelle
<b>el</b>	Βραχίονας
<b>es</b>	Brazo
<b>fi</b>	Kiinnitys
<b>fr</b>	Interface
<b>hr</b>	Međusklop
<b>hu</b>	Csatlakozás
<b>it</b>	Braccio
<b>ja</b>	ワイパーアーム先端部
<b>ko</b>	인터페이스
<b>nl</b>	Arm
<b>no</b>	Grensesnitt
<b>pl</b>	Ramię
<b>pt</b>	Braço
<b>ro</b>	Interfață
<b>ru</b>	Интерфейс
<b>sv</b>	Gränssnitt
<b>tr</b>	Ara parça
<b>cn</b>	接口

**2 Assembly (en\*)**

<b>bg</b>	Монтаж
<b>cs</b>	Montáž
<b>da</b>	Montering
<b>de</b>	Montage
<b>el</b>	Συναρμολόγηση
<b>es</b>	Montaje
<b>fi</b>	Kiinnittäminen
<b>fr</b>	Montage
<b>hr</b>	Montaža
<b>hu</b>	Felszerelés
<b>it</b>	Montaggio
<b>ja</b>	取付け
<b>ko</b>	조립
<b>nl</b>	Montage
<b>no</b>	Montering
<b>pl</b>	Montaż
<b>pt</b>	Montagem
<b>ro</b>	Montare
<b>ru</b>	Установка
<b>sv</b>	Montering
<b>tr</b>	Takma
<b>cn</b>	安装

**3 Disassembly (en\*)**

<b>bg</b>	Демонтаж
<b>cs</b>	Demontáž
<b>da</b>	Afmontering
<b>de</b>	Demontage
<b>el</b>	Αποσυναρμολόγηση
<b>en</b>	Disassembly
<b>es</b>	Desmontaje
<b>fi</b>	Irrottaminen
<b>fr</b>	Démontage
<b>hr</b>	Demontaža
<b>hu</b>	Leszerelés
<b>it</b>	Smontaggio
<b>ja</b>	取外し
<b>ko</b>	분리
<b>nl</b>	Demontage
<b>no</b>	Demontering
<b>pl</b>	Demontaż
<b>pt</b>	Desmontagem
<b>ro</b>	Demontare
<b>ru</b>	Демонтаж
<b>sv</b>	Demontering
<b>tr</b>	Sökme
<b>cn</b>	拆卸