



Filter, Innenraumluft

Hinweis:

Der Innenraumluftfilter befindet sich im Wagenninneren, in Fahrtrichtung rechts hinter dem Handschuhfach.

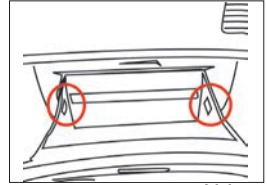


Abb. 1

Ausbau:

Das Handschuhfach öffnen und durch Lösen der seitlichen Arretierung entfernen.

(Abb. 1)

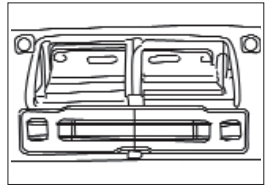


Abb. 2

Den Filterrahmen lösen und entfernen.

(Abb. 2, 3)

Den Filter vom Rahmen lösen.

(Abb. 4)

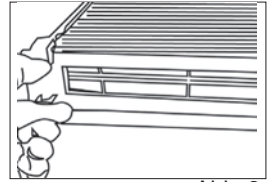


Abb. 3

Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

Auf richtigen Sitz des Filterelements achten!

Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!

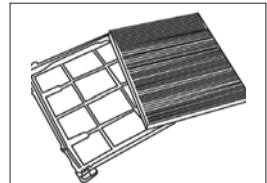


Abb. 4

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!






Filter, Cabin Air

Note:

The cabin air filter is installed inside the car at the right side behind the glove box.

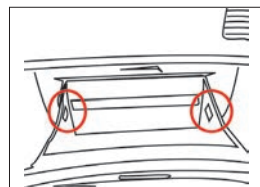

pict. 1


Filter Replacement:

Open the glove box and remove it by unscrewing the locking system.

(pict. 1)

Detach the cabin air filter frame and remove the frame.


(pict. 2, 3)

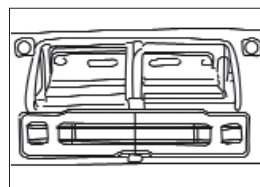

pict. 2

Separate the filter from its frame.

(pict. 4)

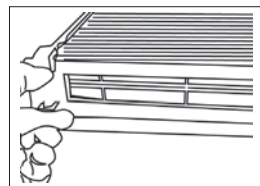


pict. 3

The installation is done in reverse sequence of replacement.

Take care about correct fitting of the filter!

Please think about the environment when you throwing away the old filter!

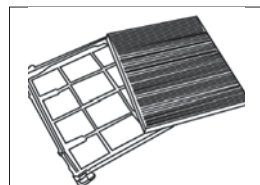

pict. 4

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

