

RADIATOR HOSE WITH FLANGE AND COOLANT TEMPERATURE SENSOR

Function

The coolant temperature sensor is located in a plastic housing and is located to the rear of the engine. This hose transfers the coolant from the rear of the engine to the thermostat housing, which is located at the front of the engine.

Failure

Due to its close proximity to the catalytic convertor, the coolant temperature housing suffers from constant exposure to heat which can cause the plastic housing/flange to crack. This can be most commonly found around the coolant temperature sensor, resulting in a coolant leak.