

Einbauanleitung

Innenraumfilter

Fitting instructions

Cabin air filter

Istruzioni di montaggio

Filtro abitacolo

Notice de montage

Filtre d'habitacle

Instrucciones de montaje

Filtro de habitáculo

Monteringsanvisning


Kupéfilter	10.96 →
Audi A3	02.97 →
Seat Arosa	09.93 →
Seat Cordoba	09.93 →
Seat Ibiza	11.95 →
Seat Inca	11.94 →
Seat Toledo	09.96 →
Skoda Oktavia	11.94 →
VW Polo	07.93 →
VW Golf III	07.93 →
VW Vento	07.93 →

21651955/21651912


CC1027/CP1027

MC 544/MP 044


1. Audi A3, VW Polo _____

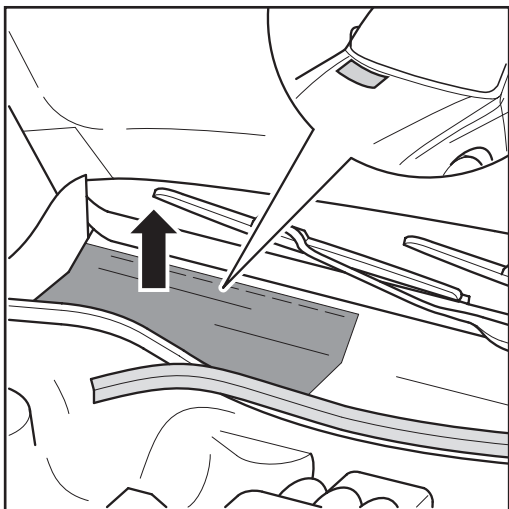


1. Seat Arosa/Cordoba/Ibiza/Inca/Toledo _____

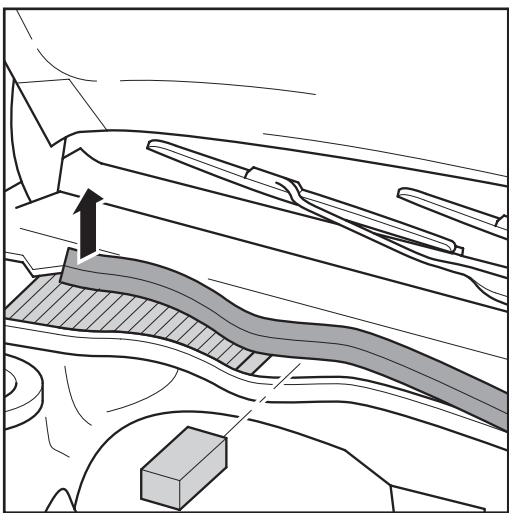


1. Skoda Octavia _____

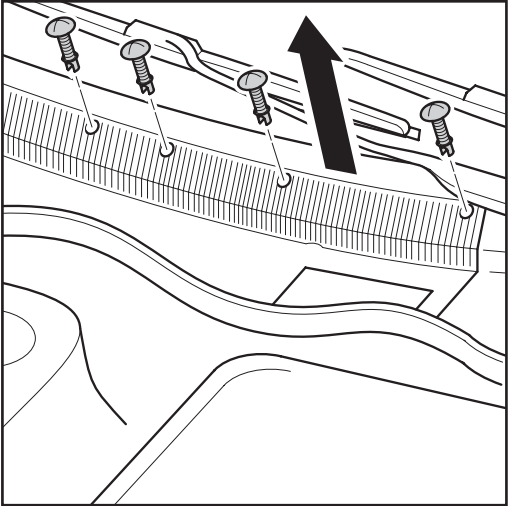


1. VW Golf/Vento _____

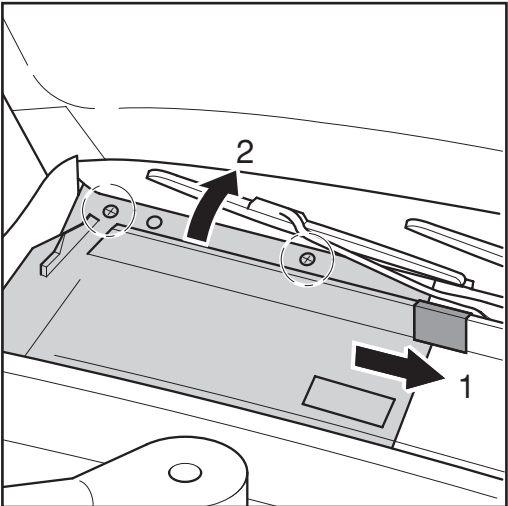

2.

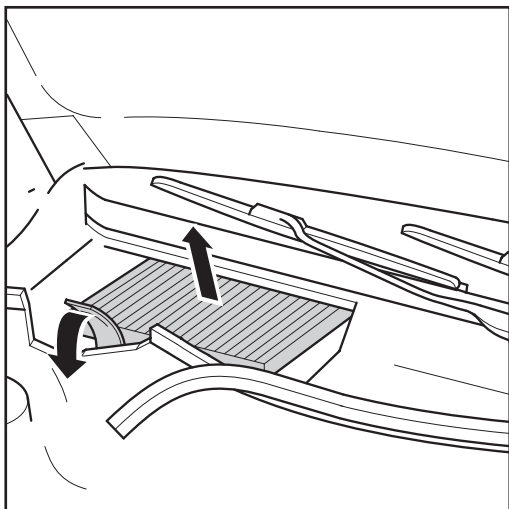

3.

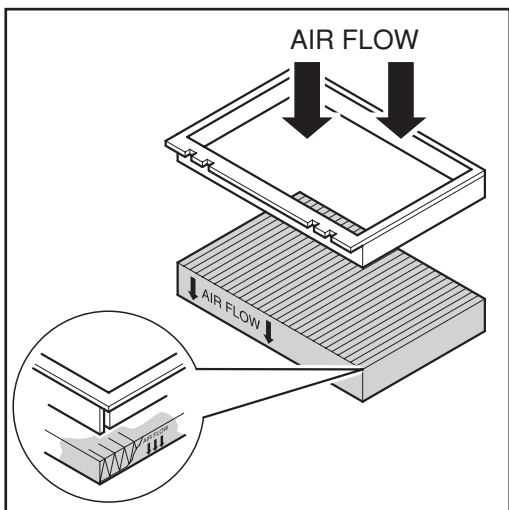



- Ⓓ Wechselintervall alle 15.000km oder nach einem Jahr
- ⒼⒷ Replacement interval 15.000km/10.000miles or after 12 months
- Ⓘ Sostituzione dopo 15.000km o dopo un anno
- Ⓕ Intervalle de remplacement 15.000km ou une fois par an
- Ⓔ Intervalo de cambio 15.000km o después de 1 año
- Ⓒ Bytesintervall 15.0000km eller senast inom 1 år



- Ⓓ Weitere Montage erfolgt in umgekehrter Reihenfolge
- ⒼⒷ Assembly is the reverse order of operation
- Ⓘ Per il montaggio eseguire le operazioni in senso inverso
- Ⓕ Le remontage s'effectue dans l'ordre inverse
- Ⓔ Para concluir la instalación, seguir el orden inverso
- Ⓒ Ytterligare ihopmontering sker i omvänd ordningsföljd