

**years
guarantee**

3




AIRTEX®




BOMBA DE AGUA · KIT DE DISTRIBUCIÓN · WATER PUMP · TIMING BELT KIT · WASSERPUMPE · ZAHNRIEMENSATZ · POMPE À EAU · KIT DE COURROIE DE DISTRIBUTION

1

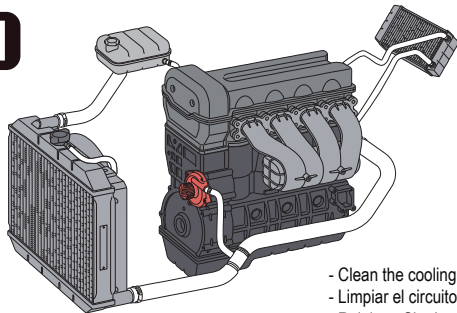


- Clean the cooling system.
- Limpiar el circuito de refrigeración.
- Reinigen Sie das Kühlsystem.
- Nettoyer le système de refroidissement.

2

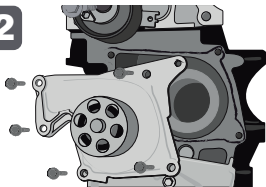


- Remove timing belt kit components and water pump.

3

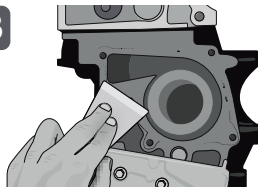


- Clean the block engine.

4

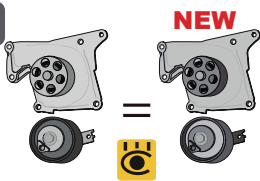


- Check that they are the same parts.

5

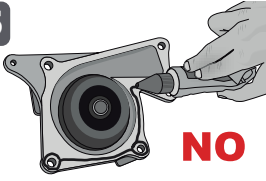


- Not use silicone joint if there is gasket.

6

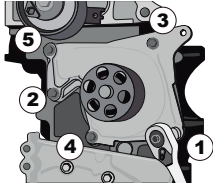


- Fit water pump in right order.

7

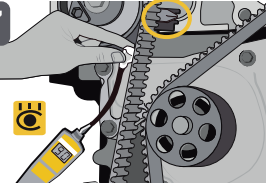


- Replace all timing belt kit components and check the correct belt tension.

8

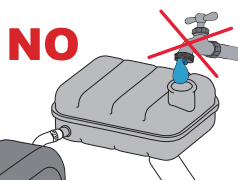

- No water allowed.

9

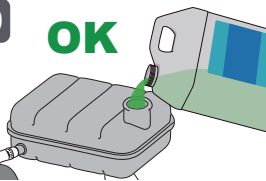


- Use the correct coolant liquid and not reuse the old liquid.




BOMBA DE COMBUSTIBLE · FUEL PUMP · KRAFTSOFFPUMPEN · POMPE À CARBURANT

1

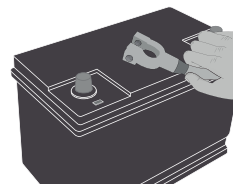


- Disconnect the battery earth lead.

2

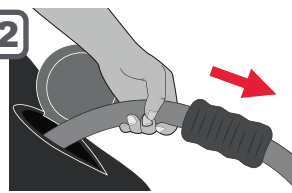


- Drain the fuel of the tank.

3

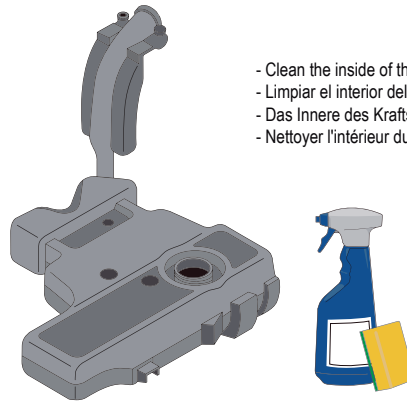


- Clean the inside of the fuel tank.
- Limpiar el interior del depósito de combustible.
- Das Innere des Kraftstofftanks reinigen.
- Nettoyer l'intérieur du réservoir à carburant.

4

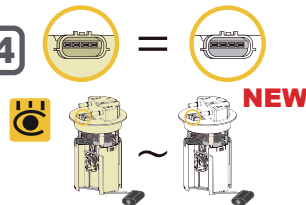


- Check that they are equivalent parts.

5

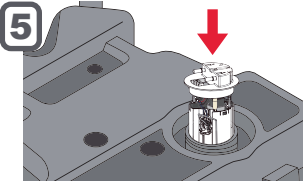


- Fit correctly the fuel pump module.

6

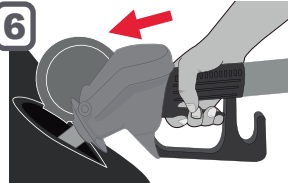

- Fill the fuel tank.

7

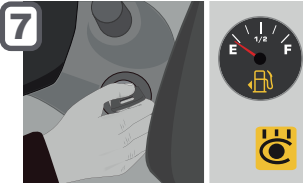

- Switch on the vehicle and check fuel level sender works correctly.

8



- Reset the control unit if the fuel level sender does not work correctly.

9



- Switch on the vehicle and check again fuel level sender works correctly.