


## E148118 Installation Instructions

It is **Very Important** to ensure that the correct procedure is followed as detailed below when refitting the O rings supplied and thermostatic valve to the replacement filter.



1. Locate the two O rings supplied with the filter for the thermostatic valve.

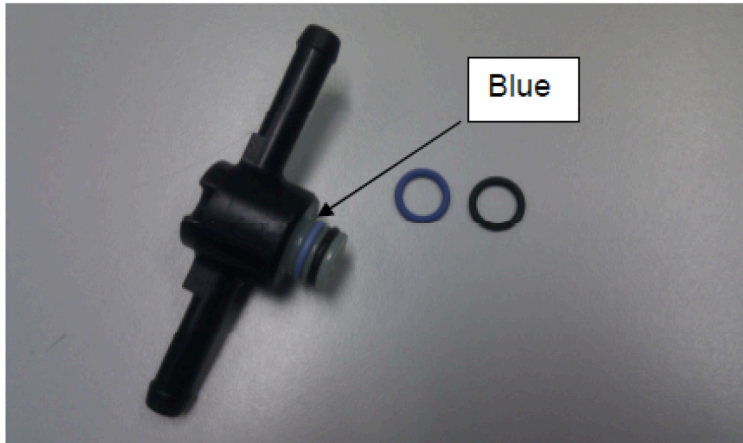

2. Remove the O rings from the thermostatic valve observing the correct position of the Blue O ring at the top.



3. Lubricate the O rings with diesel fuel and locate into the housing securing with the retaining clip.  
Blue