

ATTENTION

When installing this valve, please be aware, that to avoid damaging the valve, you must connect it to the plug of the car first, while activating your tester function "replace EGR valve"

- the valve head will retract slightly, and this will allow you to install it correctly into the cooler module.

