



## Filter, Innenraumluft

### Hinweis:

Der Innenraumluftfilter befindet sich im Wagenninneren, in Fahrtrichtung rechts hinter dem Handschuhfach.

### Ausbau:

Das Handschuhfach öffnen und durch Lösen der seitlichen Arretierung entfernen.

(Abb. 1)

Den Innenraumluftfilter durch Lösen der Befestigungsschrauben entfernen.

(Abb. 2, 3)

### Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

### Auf richtigen Sitz des Filterelements achten!

### Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!

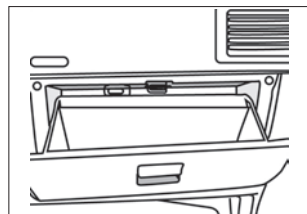


Abb. 1

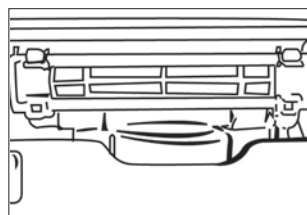


Abb. 2

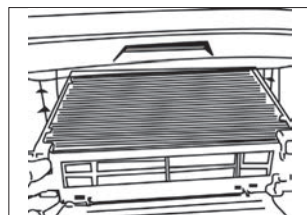


Abb. 3





## Filter, Cabin Air


### Note:

The cabin air filter is installed inside the car at the right side behind the glove box.

### Filter Replacement:

Open the glove box and remove it by unscrewing the locking system.

(pict. 1)

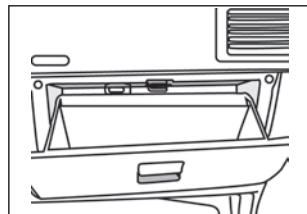

pict. 1

Remove the cabin air filter by unscrewing the fitting bolts. (pict. 2, 3)


The installation is done in reverse sequence of replacement.

**Take care about correct fitting of the filter!**


**Please think about the environment when you throwing away the old filter!**

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

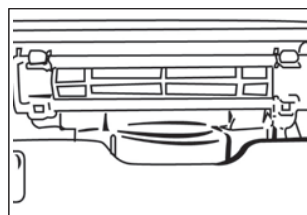

pict. 2

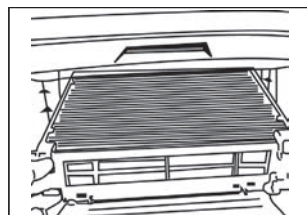

pict. 3

