
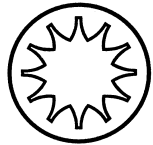
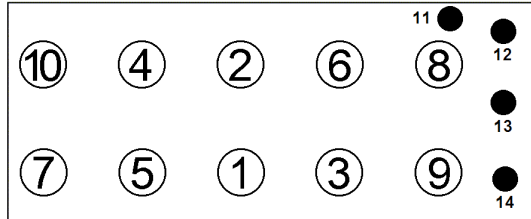


Anziehvorschrift für Zylinderkopf	240.160	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Audi / Bentley

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



233.930
M 10x1,5x134



Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	M10 30 Nm 60 Nm 90° 90°	M6 10 Nm 90°
---	-------------	-------------------------------------	--------------------

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ □ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
-----------------------	--	---	---	--

Motortyp / Engine type / Type de moteur / Tipo de motor

V8, TFSI, rechts/right

Mot. CEUC, CEUA, CGTA, CTFA, CRDB
CMMC, CMMD, CYCA, CYCB

S6, RS6, S7, RS7, A8, S8
New Continetal, Flying Spur

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

240.160