
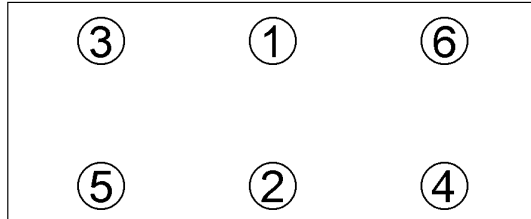
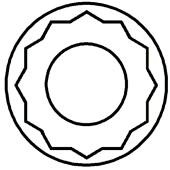


Anziehvorschrift für Zylinderkopf	650.230	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Subaru Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



Anziehen/ Tightening/ Serrage/ Apriete	* -> MY 2009 29 Nm 69 Nm ➤ lösen 180° ➤ lösen 180° 49 Nm ➤ 80° - 90° ➤ 40° - 45° ➤ only bolt 1&2: 45°	* MY 2010 -> Step 1-5: 40 Nm 95 Nm ➤ lösen 180° ➤ lösen 180° 10 Nm	* MY 2010 -> Step 5-10: 30 Nm 70 Nm ➤ 80° - 90° ➤ 40° - 45° ➤ only bolt 1&2: 45°
---	---	--	--

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 101mm; $\frac{\pi}{8}$: 0,8mm

Mot: EJ251; EJ253
2.5ltr. 16V Boxer

1999→
Baja, Exiga, Forester, Impreza, Legacy,
Liberty, Outback

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

650.230