

Montageanleitung | Installation Instruction | Notice de montage

Istruzioni di montaggio | Instrucciones de montaje

Instruções de montagem | Installationsanvisning | Montagehandleiding

de Innenraumfilter

en Cabin filter

fr Filtre d'habitacle

it Filtro abitacolo

es Filtro ventilación para interior

pt Filtro de cabine


sv Kupéfilter

nl Interieurfilter

6000144384



BOSCH

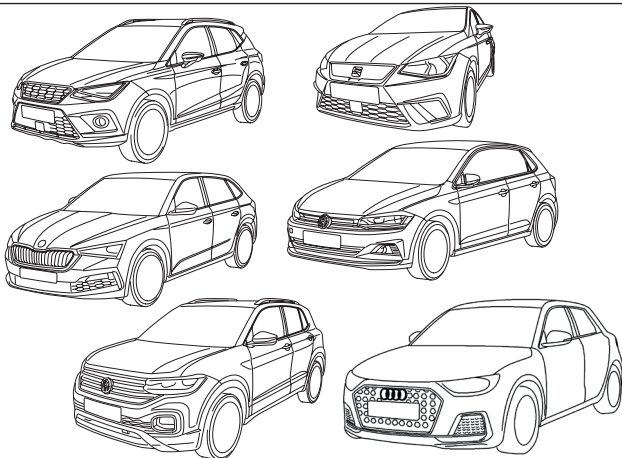

0 986 628 566

Seat Arona [KJ7]

07.17 -->

Seat Ibiza [KJ1]

01.17 -->

Skoda Scala [NW1]

02.19 -->

VW Polo [AW1]




06.17 -->




VW T-Cross [C11]

12.18 -->




Audi A1 [GB]




07.18 -->

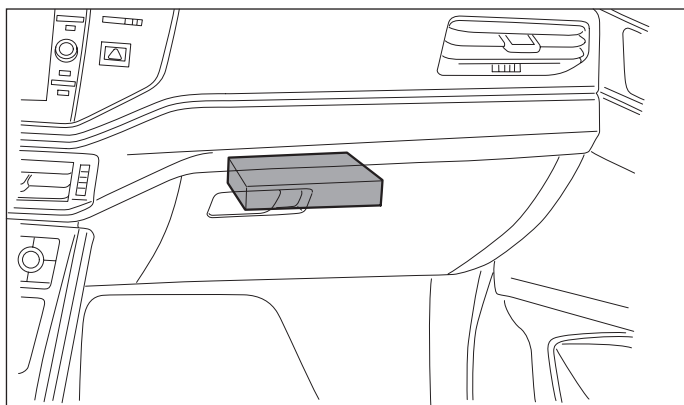
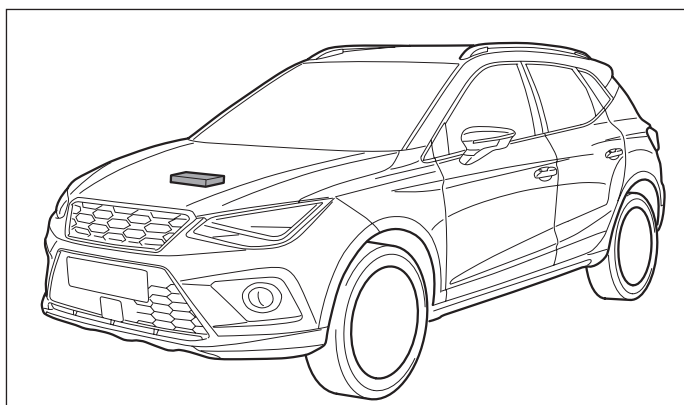
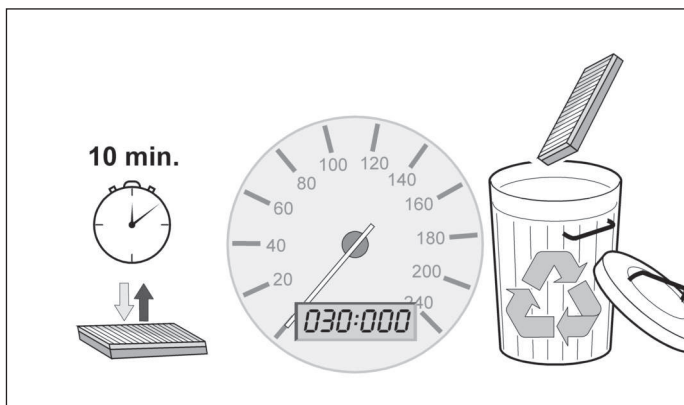


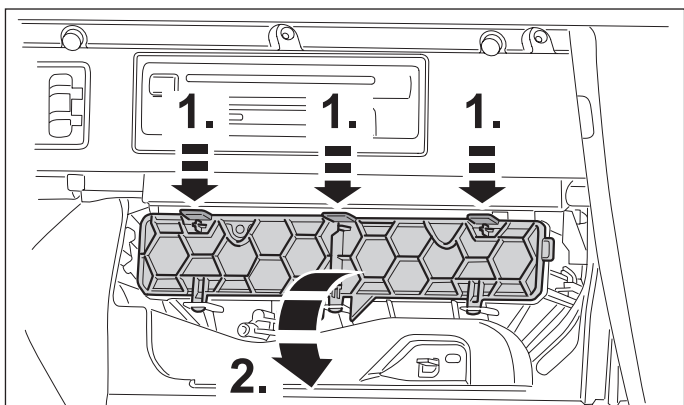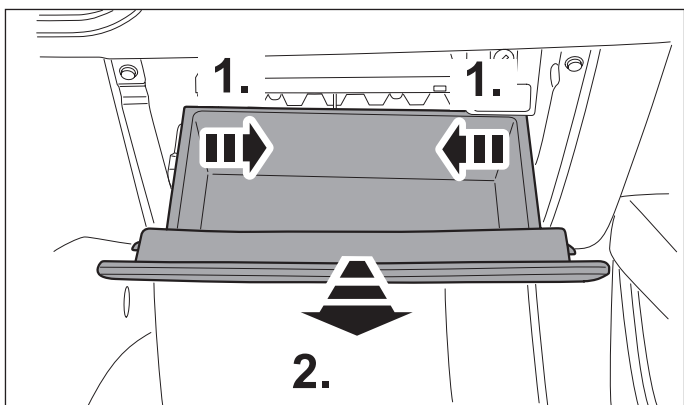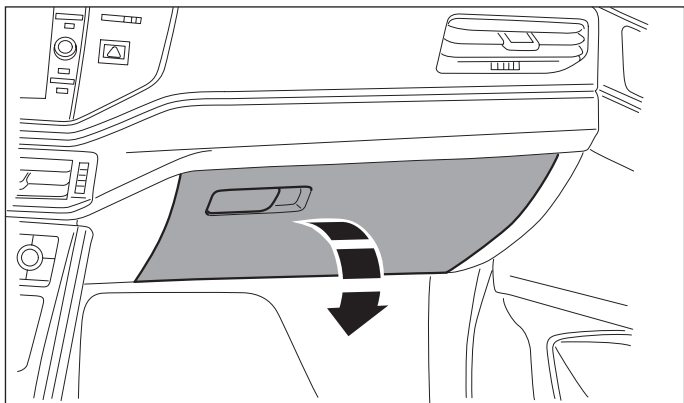




T10532

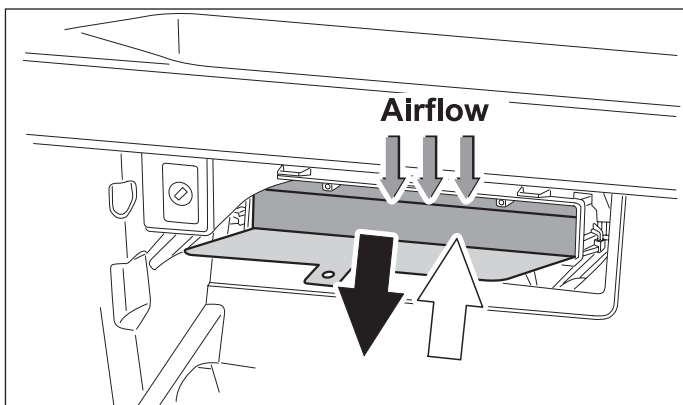
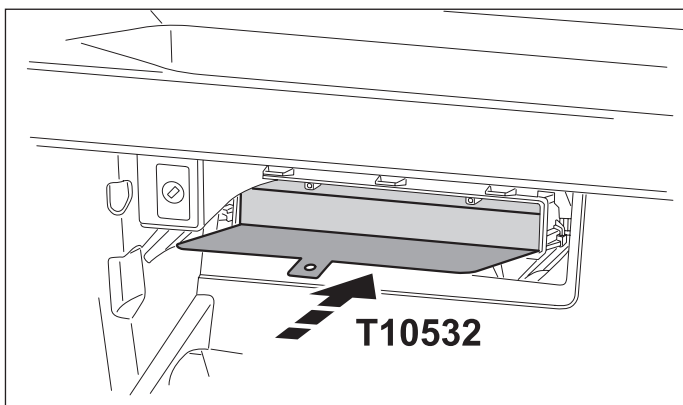
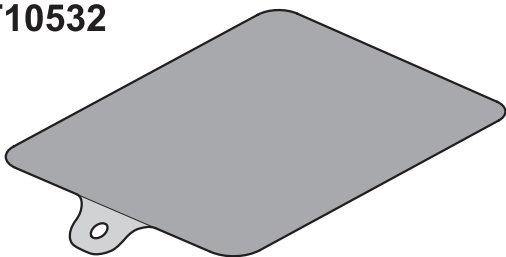


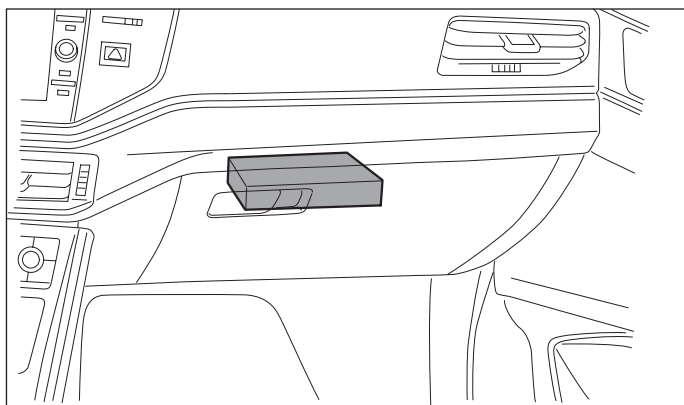
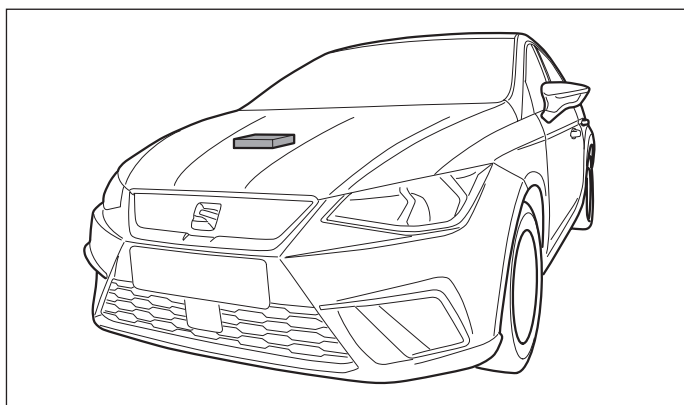
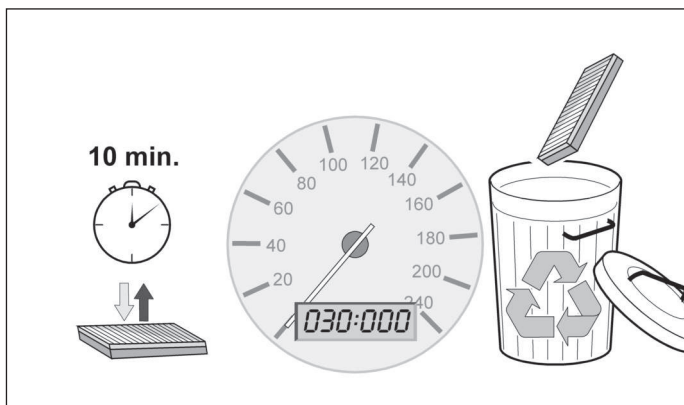


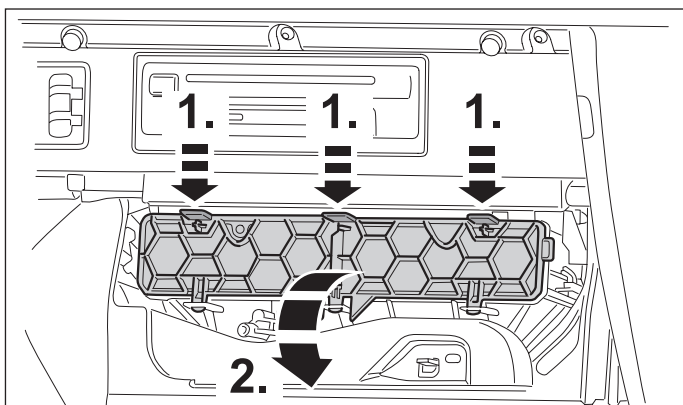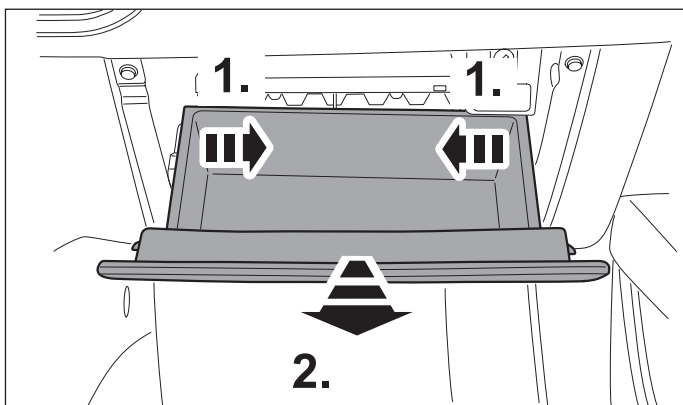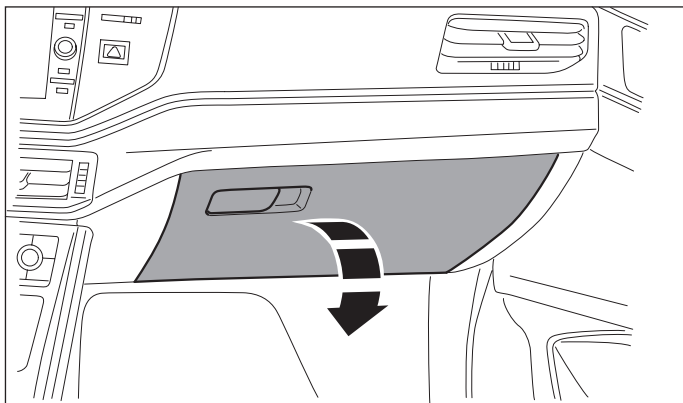




T10532

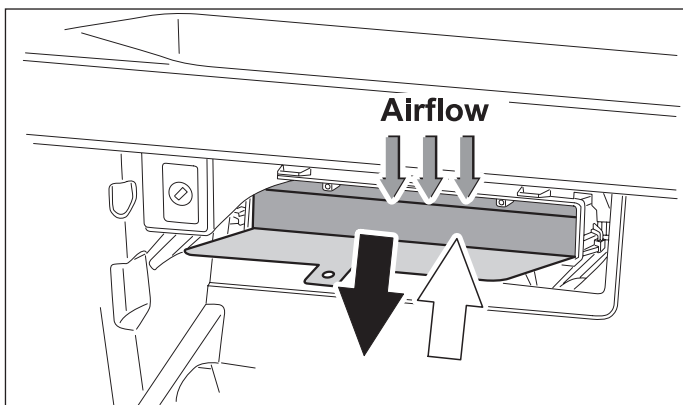
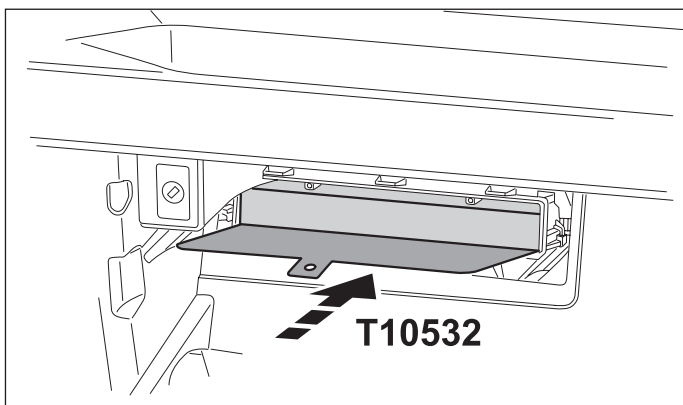
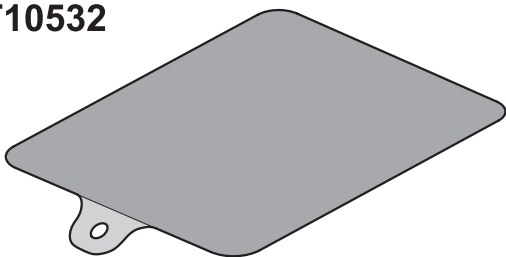


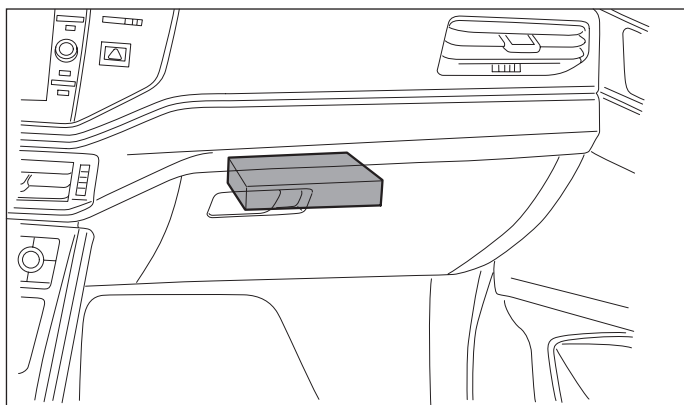
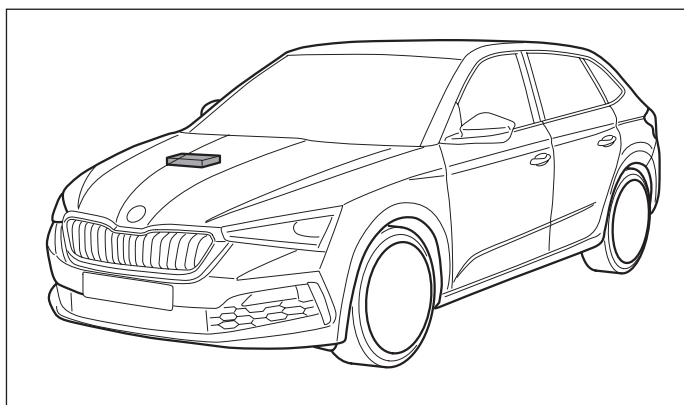
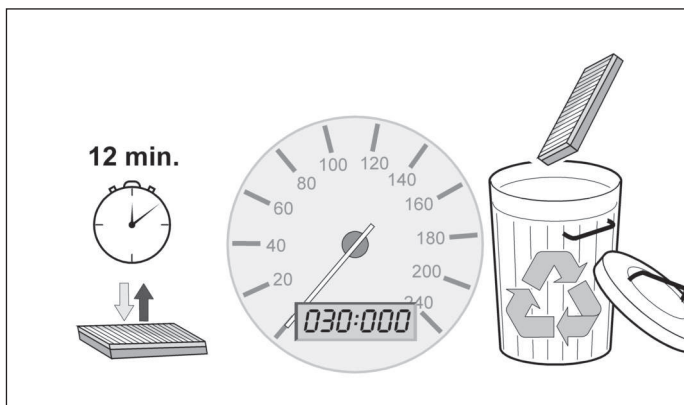


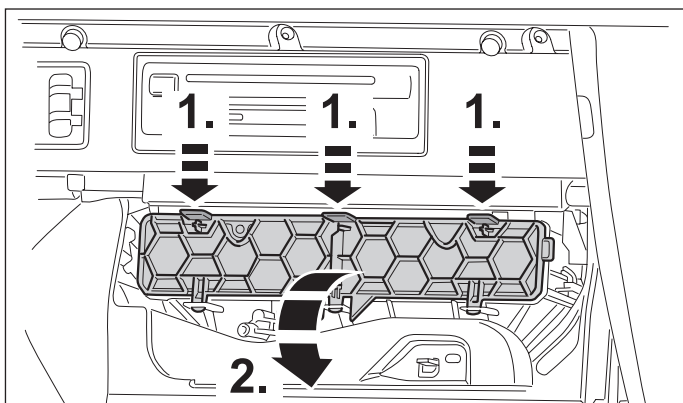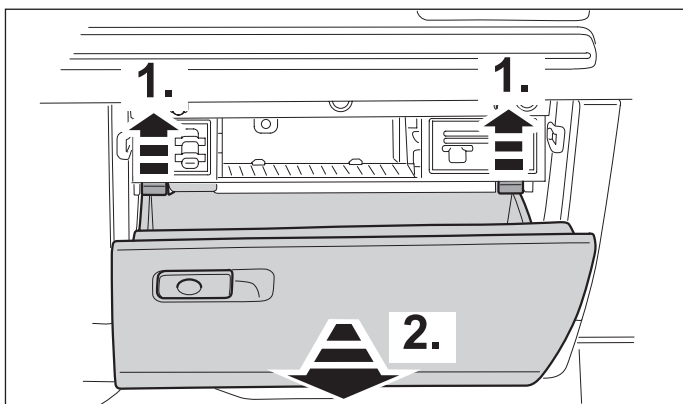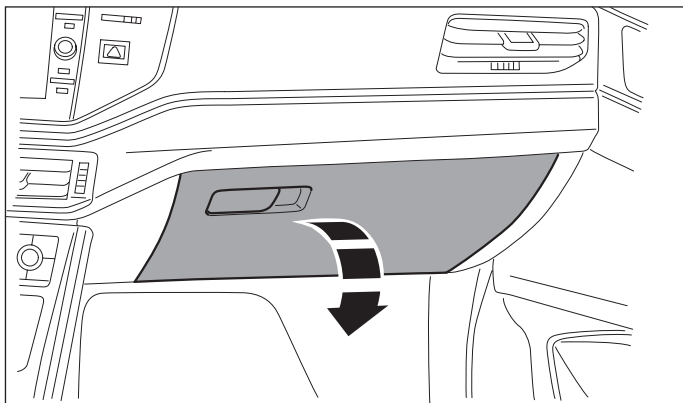

T10532

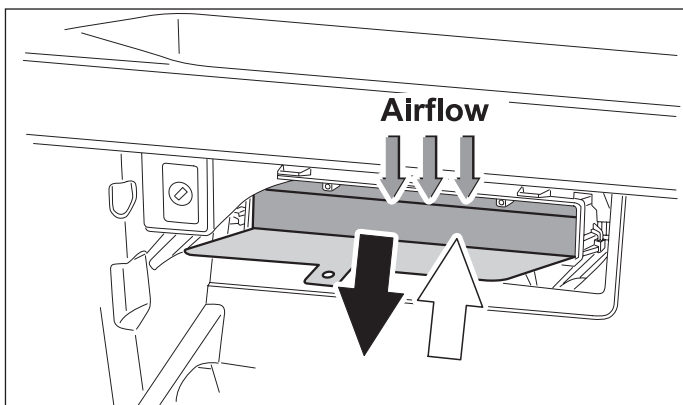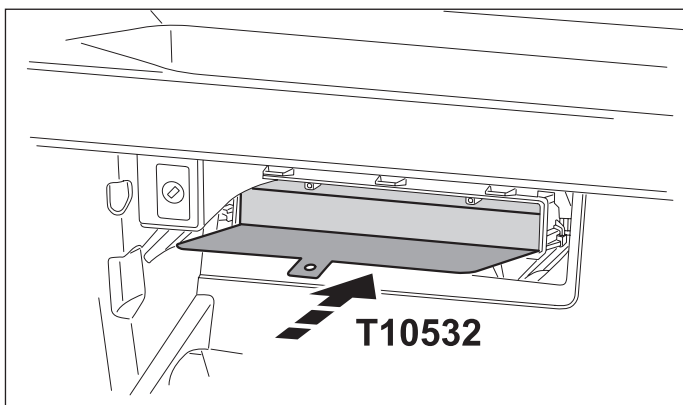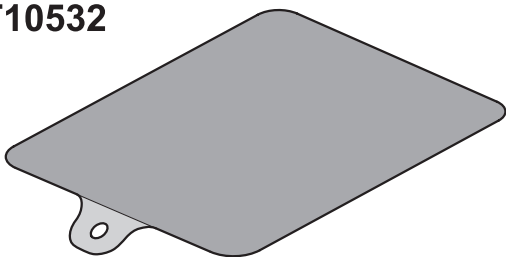

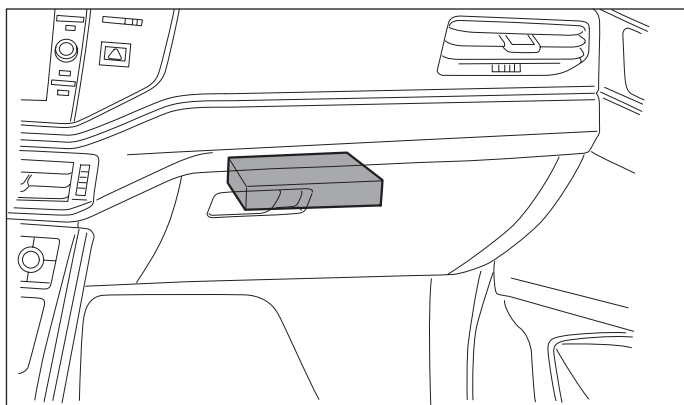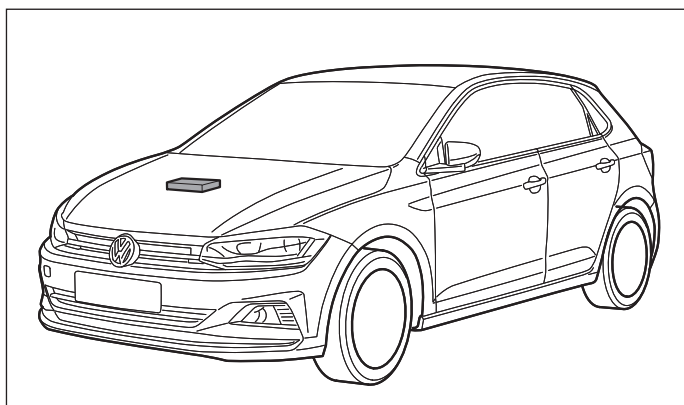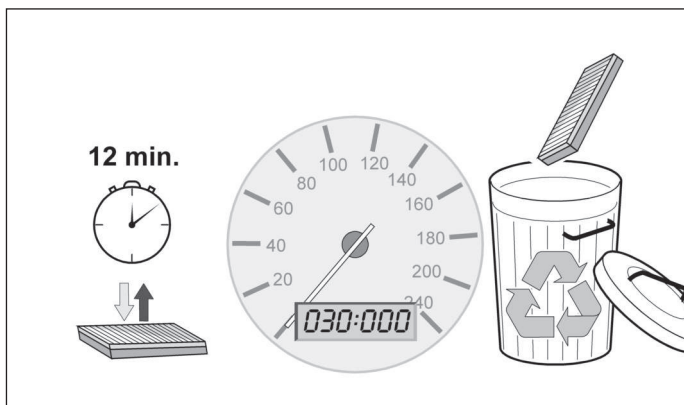

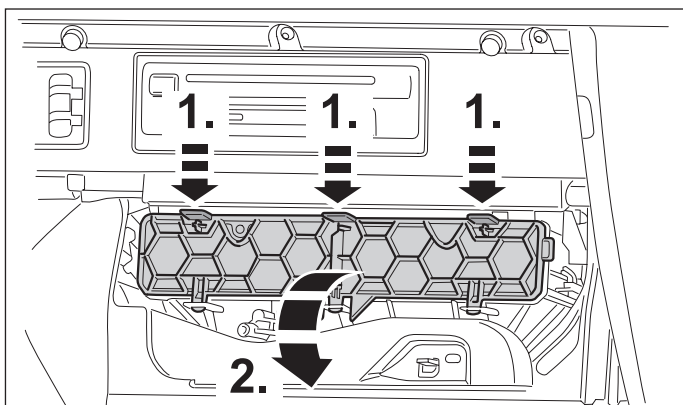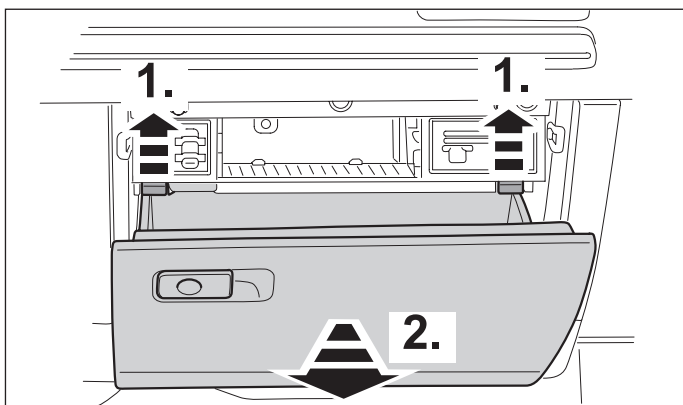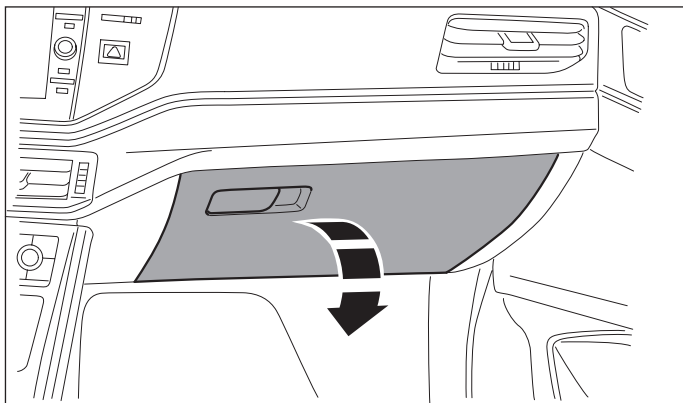

T10532

