


HOW TO ACCESS THE UPPER STRUT MOUNTINGS

Renault Scenic



FI071 EU

- The upper shock absorber mountings are accessible as follows:

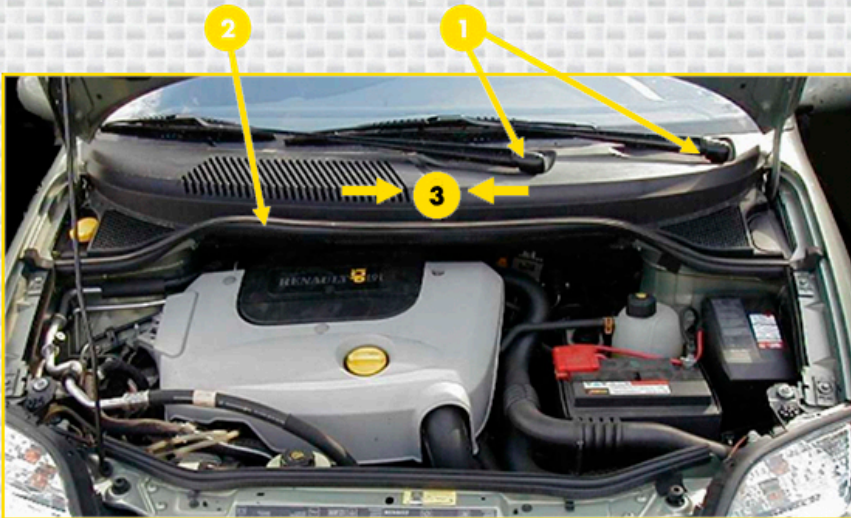

Apply a layer of sealant to the edge of the upper mounting cover, to ensure that the hood compartment is correctly sealed.

TORQUE SETTINGS	daN.m
Upper mounting	3
Piston rod nut	6
Lower mounting	17

- 1 – Take-off the front wipers arm
- 2 – Remove the rubber seal
- 3 – Remove the grill by sliding to the centre of the windshield to be able to release the clamps at the end of the plastic grill.
- 4 – Remove the cap of the upper mounting of the suspension element.
- 5 – The upper mountings of the strut are now accessible