

FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ






micronAir®

Audi	Q4	06.21 ->
Cupra	Born	08.21 ->
Skoda	Enyaq	10.20 ->
Volkswagen	ID.3	E11
Volkswagen	ID.4	E21
Volkswagen	ID.5	E39

49495701

CC1580

MF2528

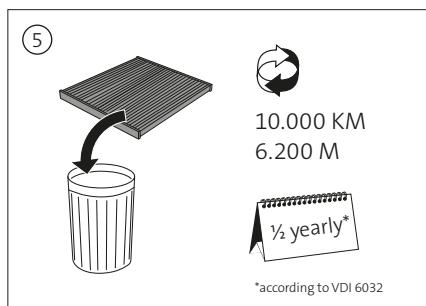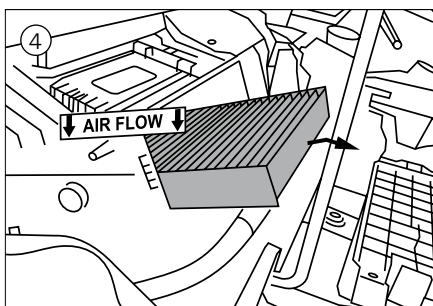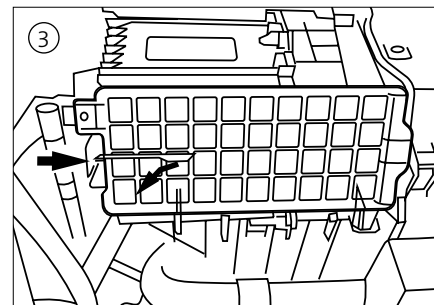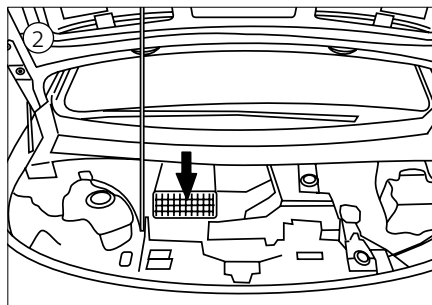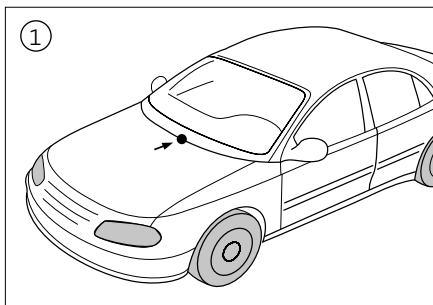

Corteco combi+

Fine dust filter (PM 2.5)
 with added:

- anti-allergic effect
- antibacterial action
- fungicidal effect