
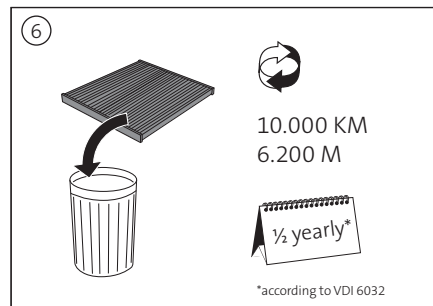
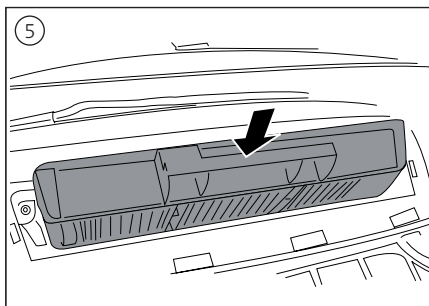
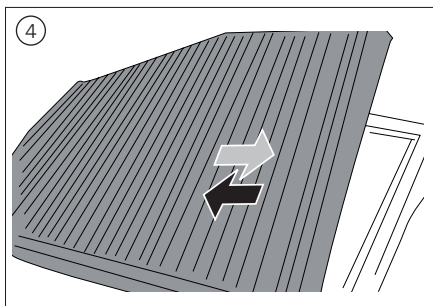
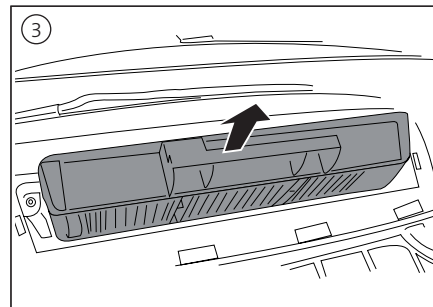
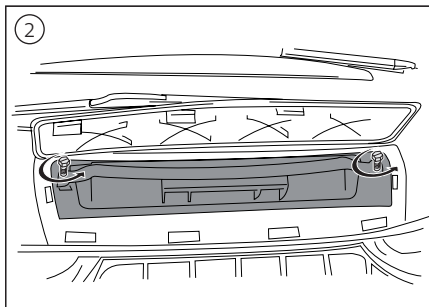


FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

Mercedes-Benz V-Klasse 09.03 →
 Mercedes-Benz Vito 09.03 →
 Mercedes-Benz Viano 09.03 →

micronAir® blue

BL648
 CB1130

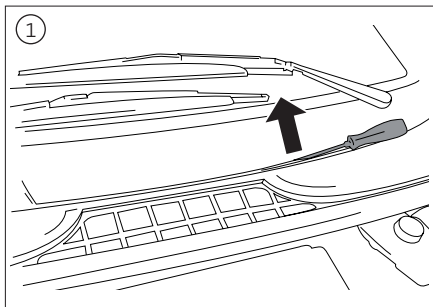

03-CA-532-December-2017-ML