
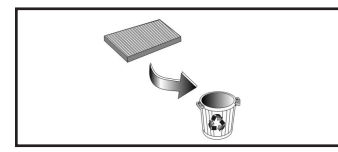
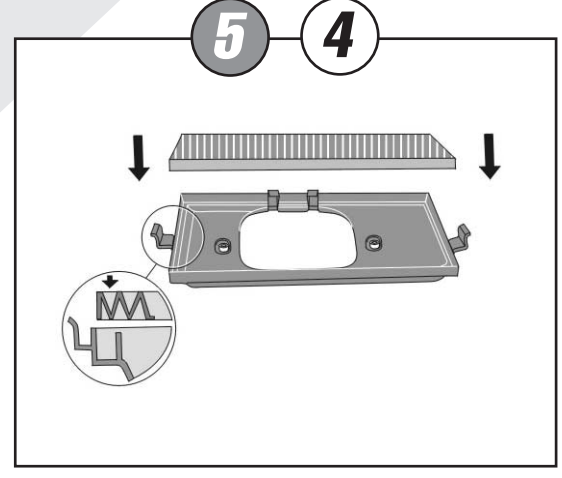
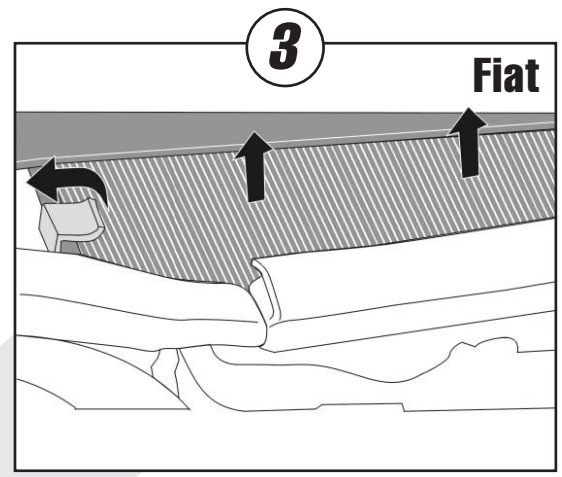


filter NC 2005
Alfa Romeo 145 - 146
Fiat Coupé

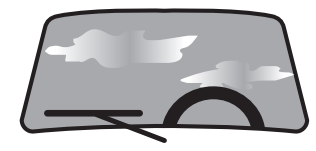


Per il montaggio procedere eseguendo le operazioni in senso inverso.





Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.


Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalación, seguir el orden inverso.


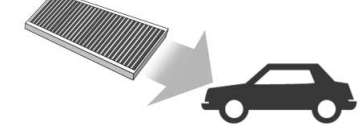


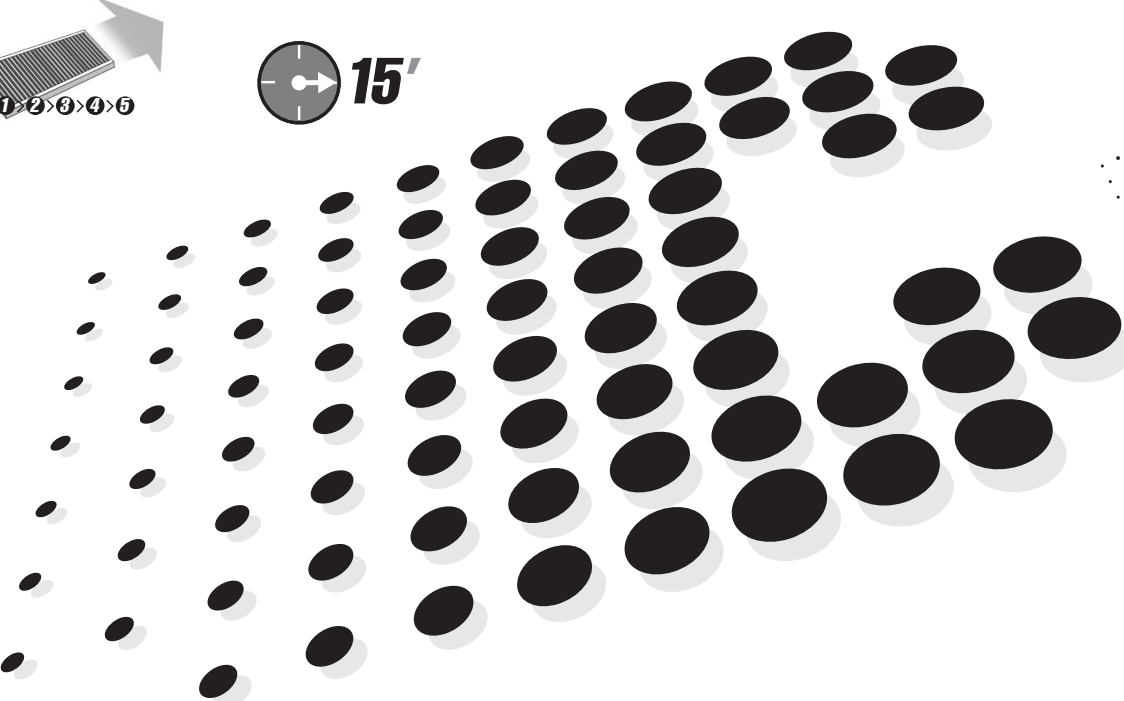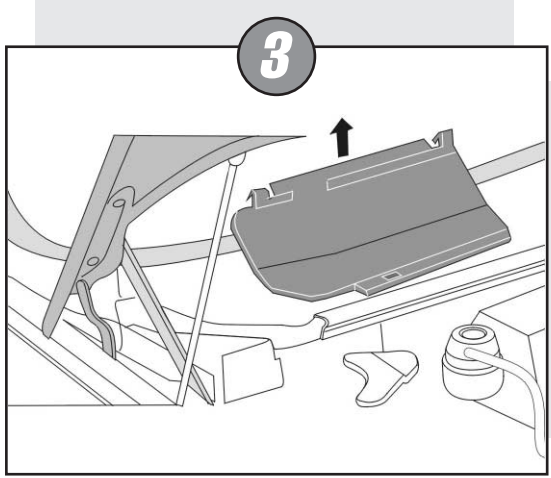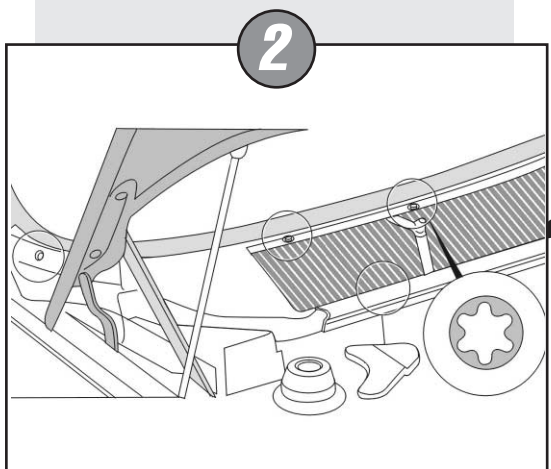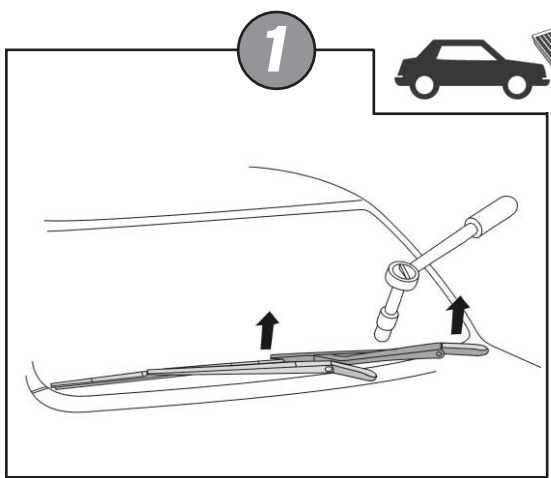

15'

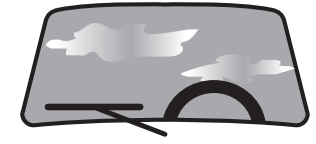

filter NC 2005
Alfa Romeo 155
Fiat Tempra - Tipo
Lancia Delta - Dedra

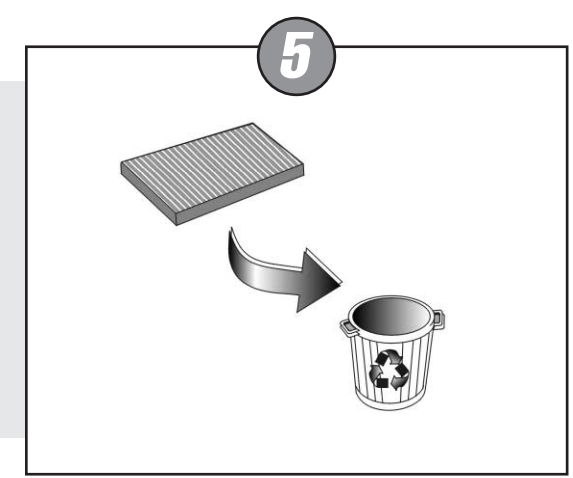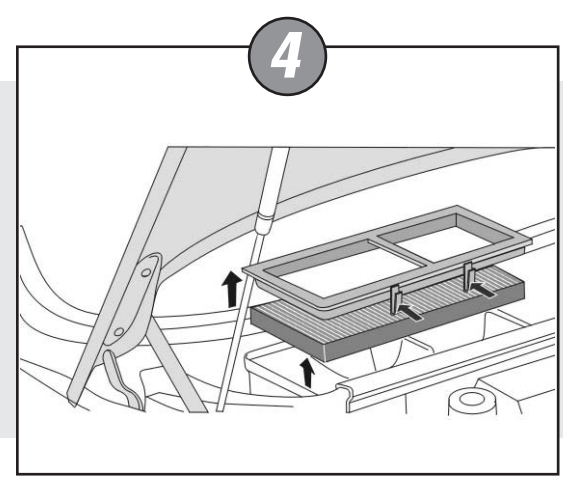

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalaci3n, seguir el orden inverso.

