
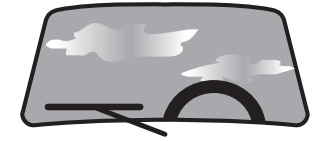
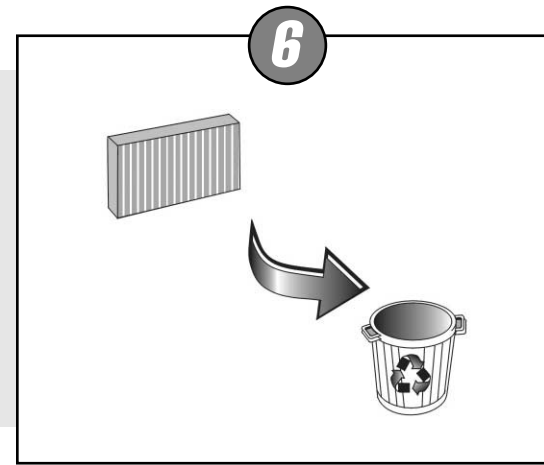
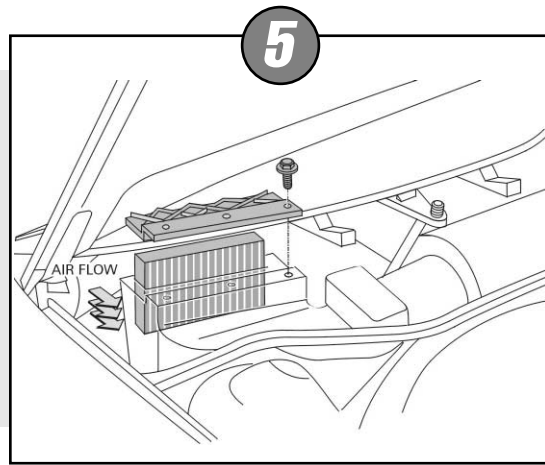
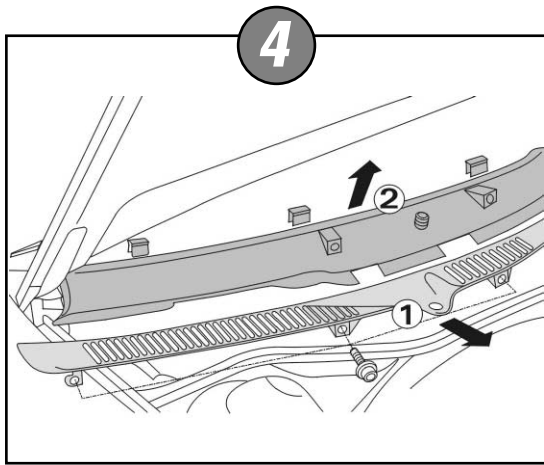
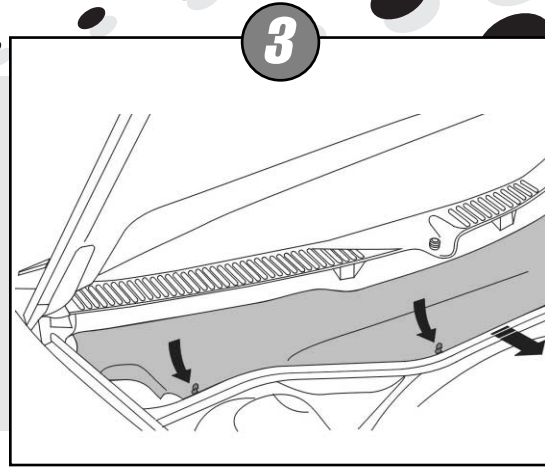
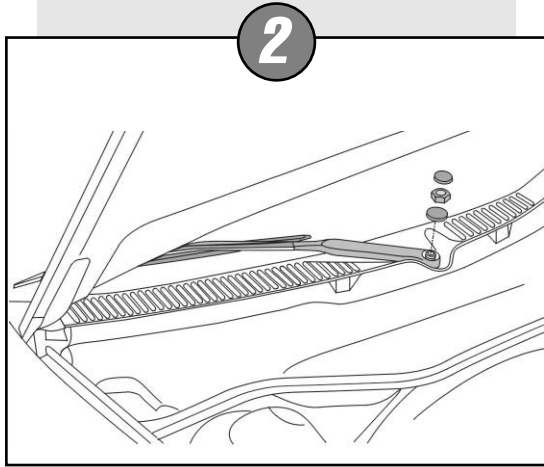


25'

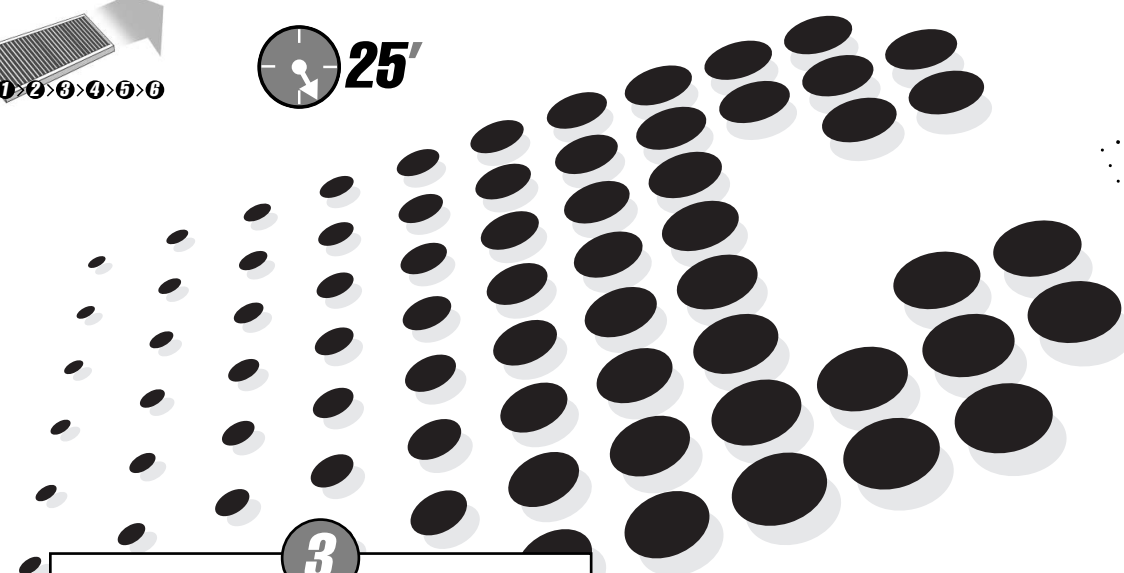

filter **NC 2041**  
**Audi A6**

Per il montaggio procedere eseguendo le operazioni in senso inverso.

*Continue mounting in reverse order of operations.*

Le remontage s'effectue dans l'ordre inverse.

*Der weitere Einbau erfolgt in umgekehrter Reihenfolge.*

Para concluir la instalaci3n, seguir el orden inverso.

