



20'


1

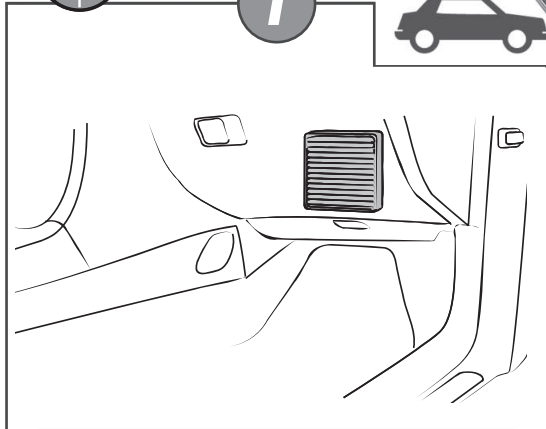


2

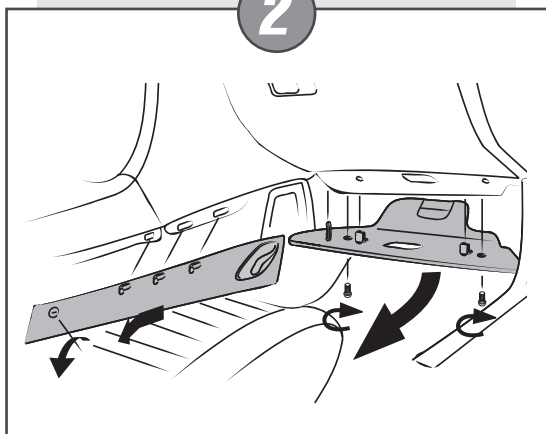




3

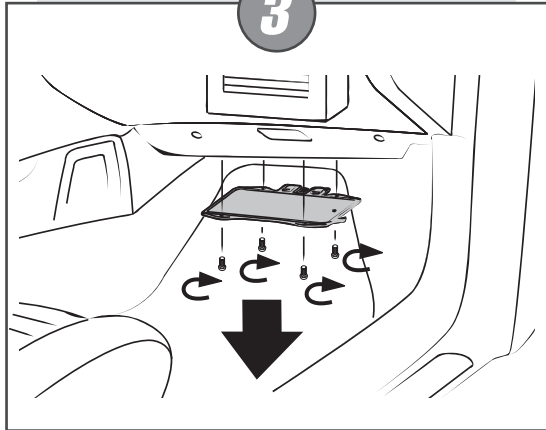

4

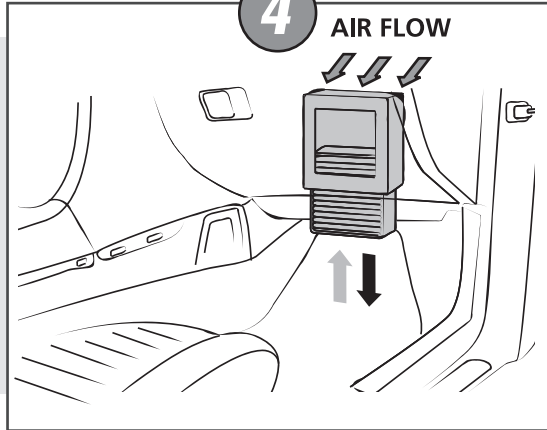

5

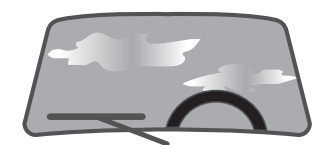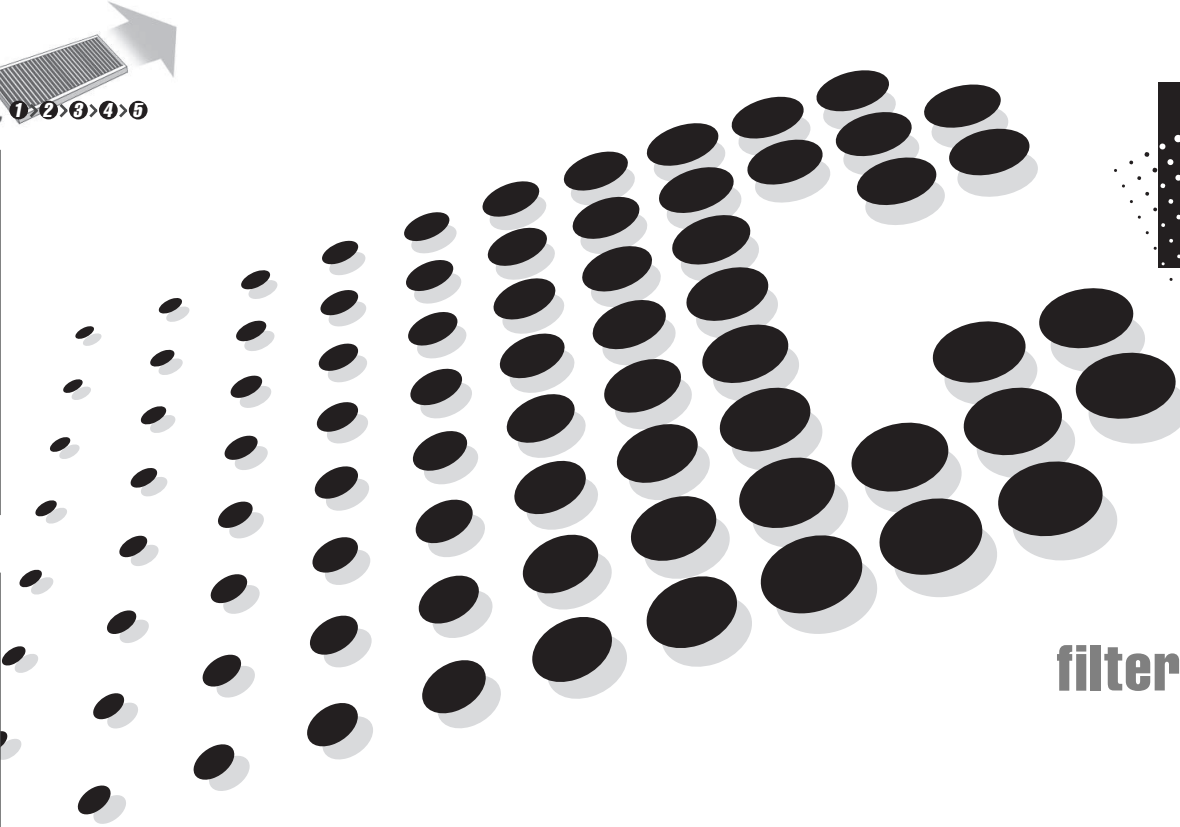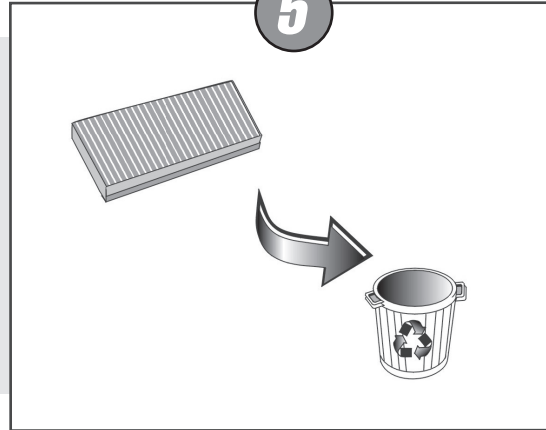

filters **NC 2086**
NC 2087
NC 2128CA

VOLVO S60, S 80, V70, XC60

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalaci3n, seguir el orden inverso.

