

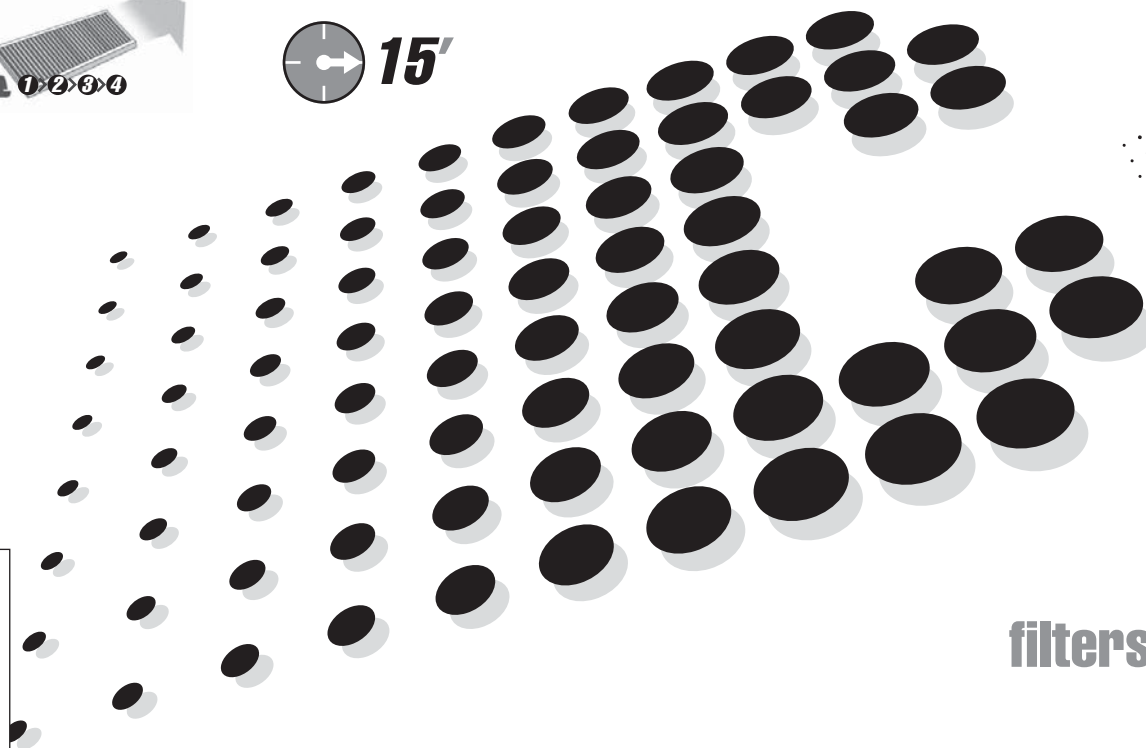
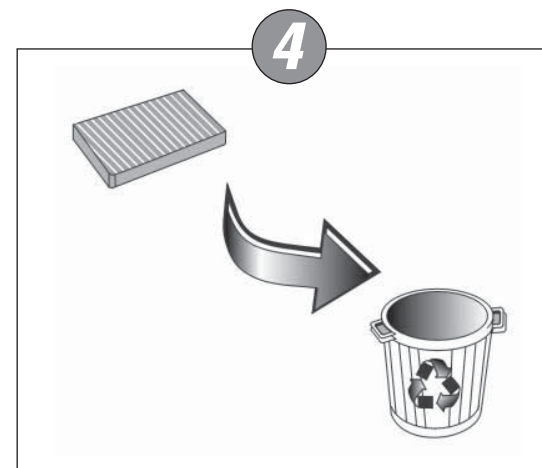
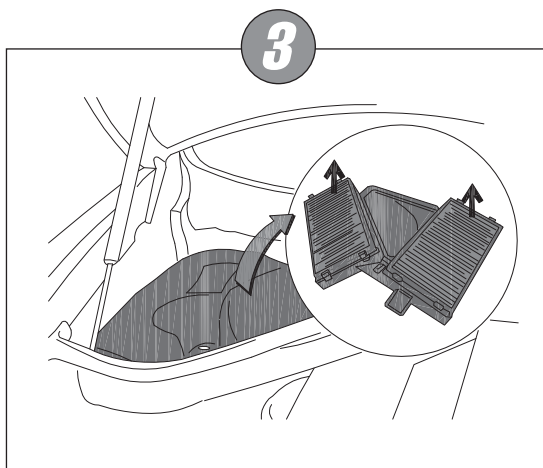


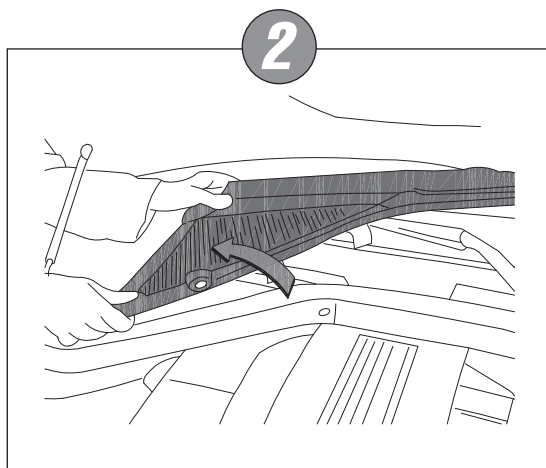

15'

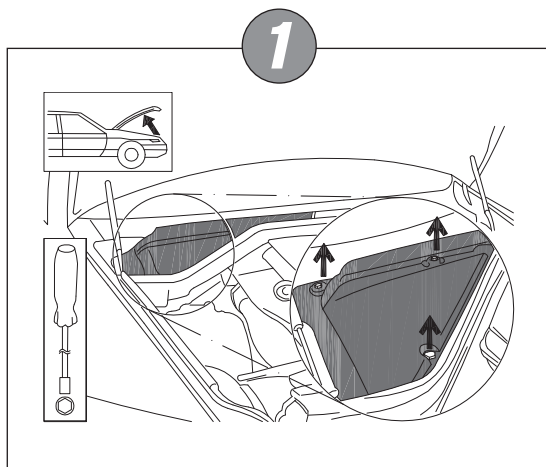

filters **NC2371**  
**NC2371CA**

**BMW**  
**X5 (02/07→)**

**X6 (02/07→)**

Per il montaggio procedere eseguendo le operazioni in senso inverso.

*Continuomounting in reverse order of operations*

Le remontage s'effectue dans l'ordre inverse.

*Der weitere Einbau erfolgt in umgekehrter Reihenfolge*

Para concluir la instalación, seguir el orden inverso.

