
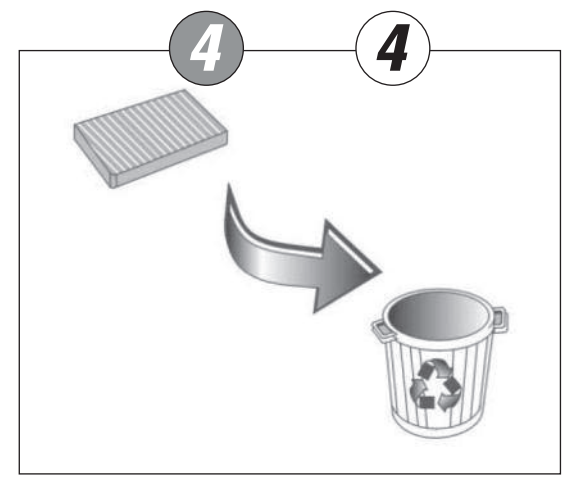
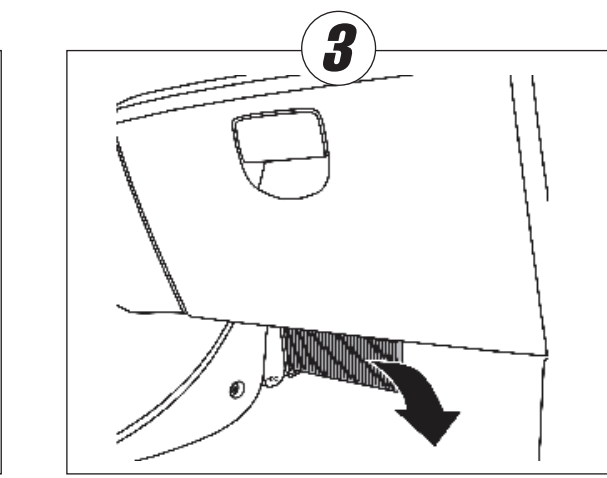
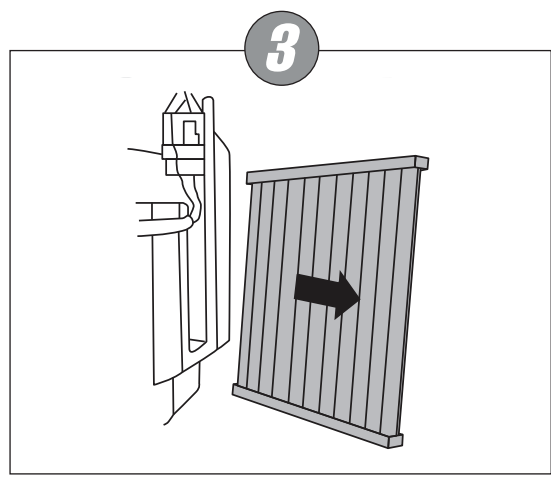
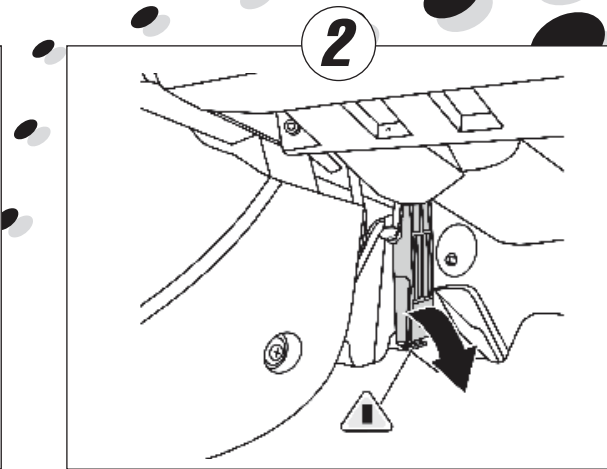
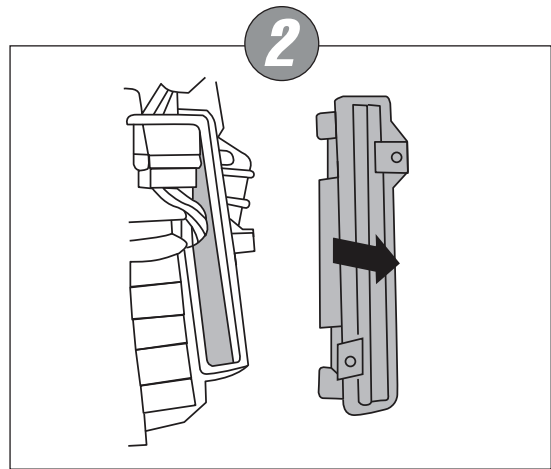
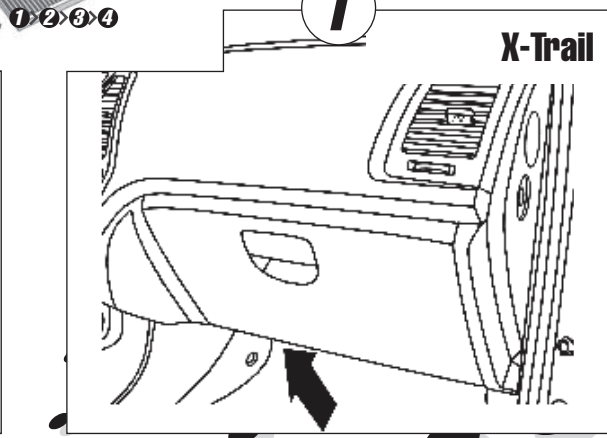


15'

15'

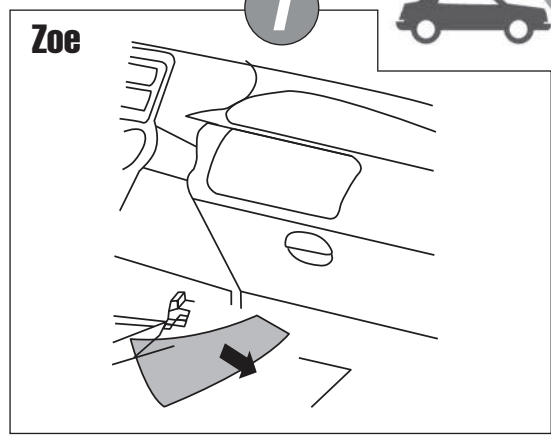

filter **NC2409**

RENAULT
Zoe (06/12→)

NISSAN
X-Trail III (12/13→)

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continuomounting in reverse order of operations

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge

Para concluir la instalaci3n, seguir el orden inverso.



• istruzioni d'installazione • installation instructions • notice de montage •

• montageanleitung • instrucciones de montaje •









filter NC2409

**DACIA
Dokker (11/12→)
Lodgy (03/12→)**

LADA Largus (03/12→)

15'

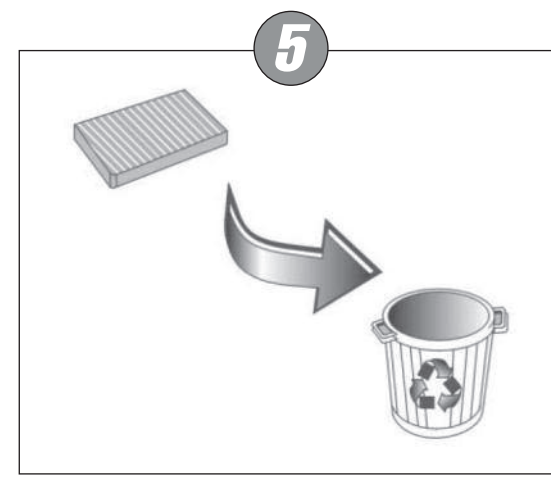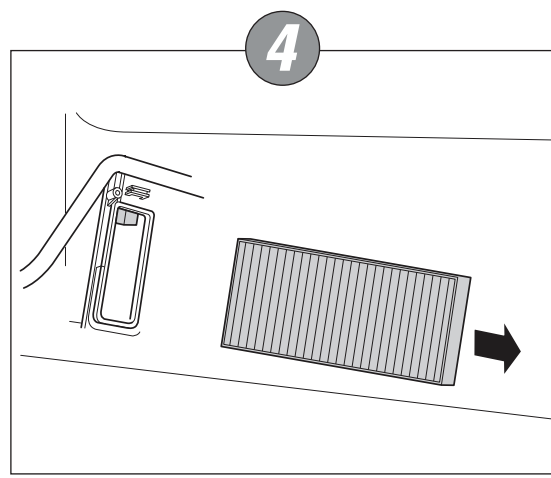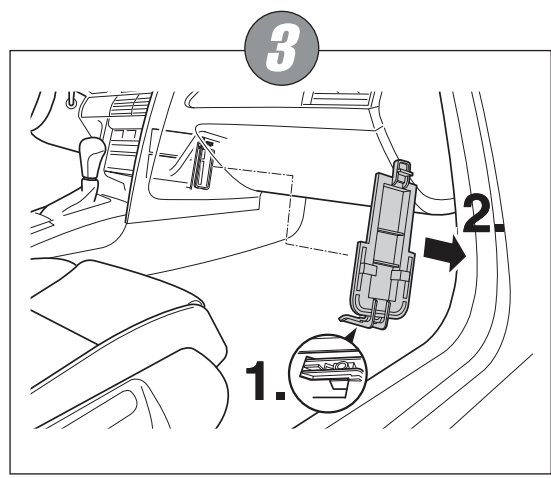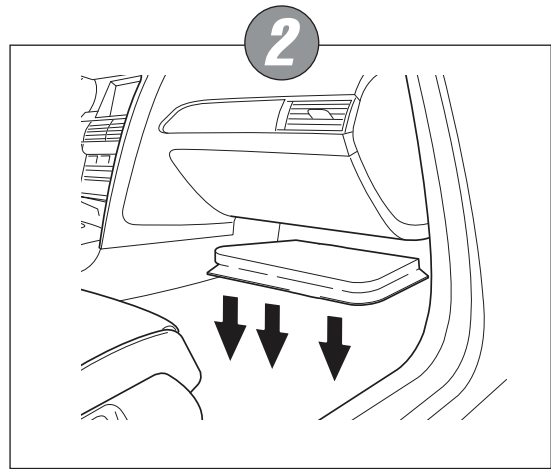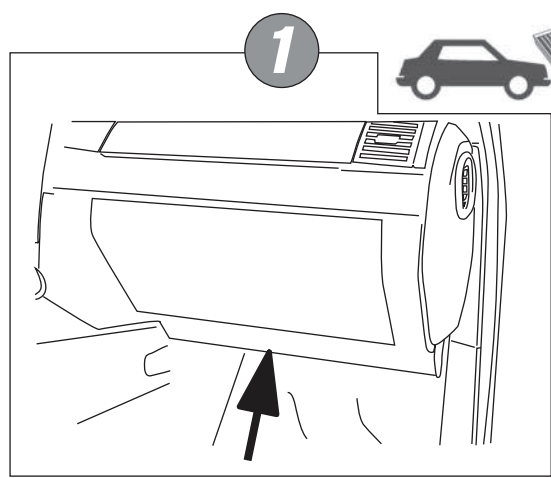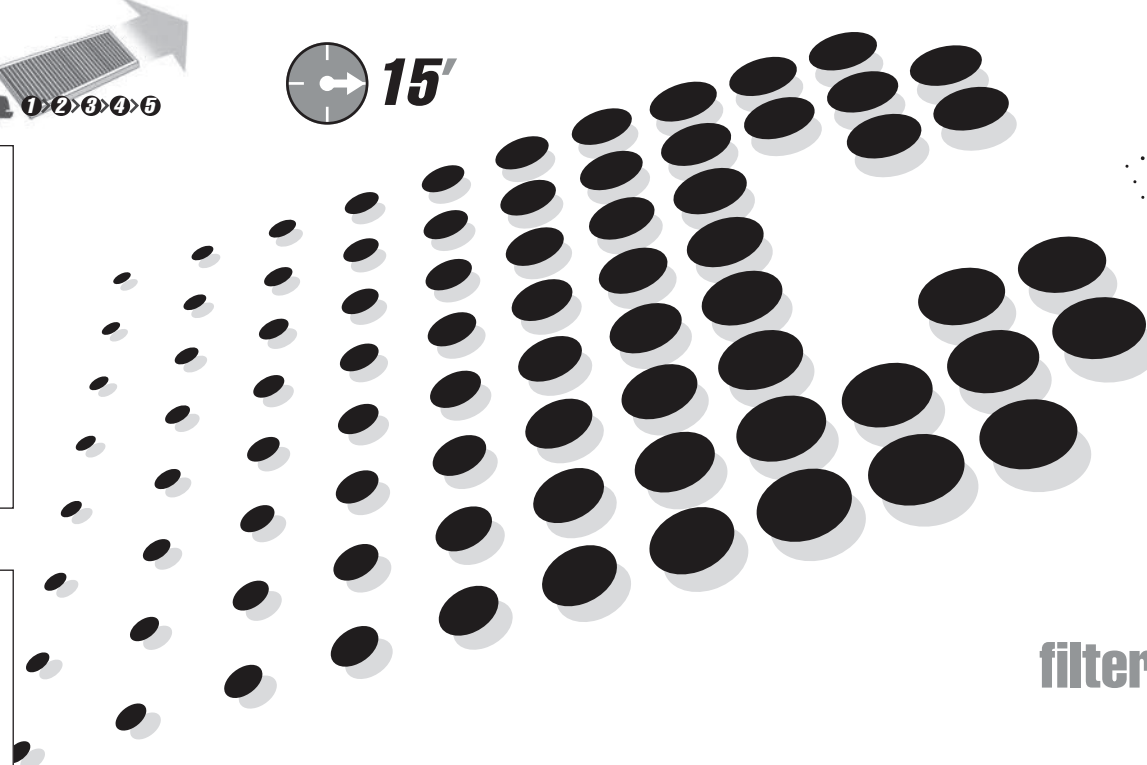

Per il montaggio procedere eseguendo le operazioni in senso inverso.
Continuomounting in reverse order of operations
 Le remontage s'effectue dans l'ordre inverse.
Der weitere Einbau erfolgt in umgekehrter Reihenfolge
 Para concluir la instalaci3n, seguir el orden inverso.



• istruzioni d'installazione • installation instructions • notice de montage •

• montageanleitung • instrucciones de montaje •