


## DONNEES TECHNIQUES

Length [mm]	<b>560</b>
Number of splines (wheels side)	<b>38</b>
Number of Teeth, ABS ring	<b>48</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>83</b>
ABS ring type	<b>W</b>
(wheels side) CV Joint Ø [mm]	<b>98</b>
Number of splines (gearbox side)	<b>35</b>
(gearbox side) CV Joint Ø [mm]	<b>98</b>
	<b>Coupling (gearbox side) not supplied</b>

## PHOTOS

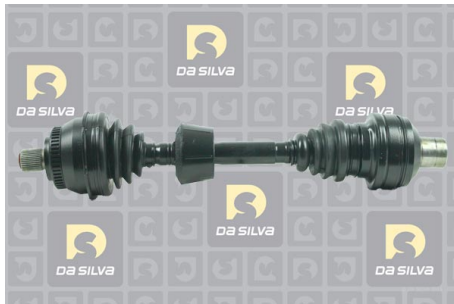


## DOCUMENTS

- BT-100**    **Conseils de montage des cardans**
- BT-104**    **Soufflets et Triaxes FIAT**
- BT-105**    **Soufflets et Triaxes SEAT**
- BT-131**    **Refus des carcasses transmissions**

## APPLICATIONS

<b>FORD</b>		
GALAXY (95-00) (WGR) - 1.9 TDI	90 ch	03.1995 > 03.2000
	110 ch	08.1997 > 03.2000
GALAXY (95-00) (WGR) - 2.0 i	116 ch	11.1995 > 03.2000
GALAXY (95-00) (WGR) - 2.3 16V	146 ch	01.1997 > 03.2000
GALAXY (00-06) (WGR) - 2.3 16V	140 ch	09.2001 >
<b>SEAT</b>		
ALHAMBRA (7V8, 7V9) - 1.8 T 20V	150 ch	10.1997 > 03.2000
ALHAMBRA (7V8, 7V9) - 1.9 TDI	90 ch	04.1996 >
	110 ch	08.1996 > 06.2000
ALHAMBRA (7V8, 7V9) - 2.0 i	115 ch	04.1996 > 03.2000
<b>VOLKSWAGEN</b>		
SHARAN (95-10) (7M8, 7M9, 7M6) - 1.8 T 20V	150 ch	09.1997 >
SHARAN (95-10) (7M8, 7M9, 7M6) - 1.9 TDI	90 ch	09.1995 >
	110 ch	09.1996 > 04.2000
SHARAN (95-10) (7M8, 7M9, 7M6) - 2.0	115 ch	09.1995 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.