


DONNEES TECHNIQUES

Length [mm]	618
Number of splines (wheels side)	38
Number of Teeth, ABS ring	48
	for vehicles with ABS
ABS Ring Ø [mm]	83
ABS ring type	W
(wheels side) CV Joint Ø [mm]	98
Number of splines (gearbox side)	26
(gearbox side) CV Joint Ø [mm]	98

PHOTOS

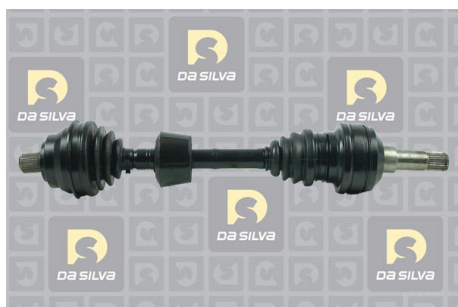


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

FORD		
GALAXY (95-00) (WGR) - 1.9 TDI	90 ch	03.1995 > 03.2000
	110 ch	08.1997 > 03.2000
GALAXY (95-00) (WGR) - 2.0 i	116 ch	11.1995 > 03.2000
GALAXY (95-00) (WGR) - 2.3 16V	146 ch	01.1997 > 03.2000
GALAXY (95-00) (WGR) - 2.8 i V6	174 ch	11.1995 > 04.2000
GALAXY (00-06) (WGR) - 2.3 16V	140 ch	09.2001 >

SEAT		
ALHAMBRA (7V8, 7V9) - 1.8 T 20V	150 ch	10.1997 > 03.2000
ALHAMBRA (7V8, 7V9) - 1.9 TDI	90 ch	04.1996 >
	110 ch	08.1996 > 06.2000
ALHAMBRA (7V8, 7V9) - 2.0 i	115 ch	04.1996 > 03.2000
VOLKSWAGEN		
SHARAN (95-10) (7M8, 7M9, 7M6) - 1.8 T 20V	150 ch	09.1997 >
SHARAN (95-10) (7M8, 7M9, 7M6) - 1.9 TDI	90 ch	09.1995 >
	110 ch	09.1996 > 04.2000
SHARAN (95-10) (7M8, 7M9, 7M6) - 2.0	115 ch	09.1995 >
SHARAN (95-10) (7M8, 7M9, 7M6) - 2.8 VR6	174 ch	09.1995 > 04.2000

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.