

(GB)•This coil replaces the original codes listed below. For the correct power-on sequence, connect the high voltage cables according to the related diagram

(I)•Questa bobina, sostituisce i sottoelencati codici originali. Per il corretto ordine di accensione, connettere i cavi alta tensione seguendo lo schema relativo.

(F)•Cette bobine remplace les codes originaux ci-dessous. Pour l'ordre d'allumage correct, connecter les cables haute tension en suivant le schéma.

(D)•Diese Spule ersetzt die unten aufgelisteten Originalteilenummern. Für eine korrekte Einschaltfolge müssen die Hochspannungskabel gemäß dem entsprechenden Diagramm angeschlossen werden.


(E)•Esta bobina sustituye los códigos originales citados abajo. Para el orden de encendido correcto, conectar los cables de alta tensión siguiendo el diagrama correspondiente.

ALFA ROMEO		FIAT	
60558152	RIF. 1	60809606	RIF. 1
60586072	RIF. 3	7648797	RIF. 1
60809606	RIF. 1	HONDA	
BOSCH		30520-PDF-E01	RIF. 1
0 221 503 407	RIF. 1	PEUGEOT	
0 221 503 457	RIF. 3	5970 53	RIF. 1
CITROEN		VOLKSWAGEN	
5970 53	RIF. 1	048 905 105 1	RIF. 1
		KIA	
		0K011-18-100	RIF. 2




RIF.3

ALFA ROMEO
60586072
BOSCH
0 221 503 457

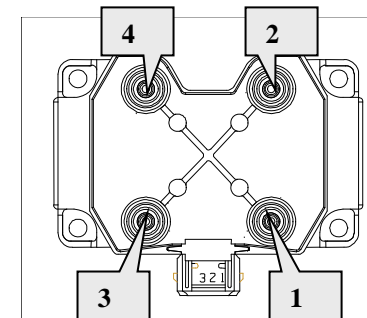

RIF.1

ALFA ROMEO	HONDA
60558152	30520-PDF-E01
60809606	PEUGEOT
BOSCH	5970 53
0 221 503 407	VOLKSWAGEN
CITROEN	048 905 105 1
5970 53	
FIAT	
60809606	
7648797	

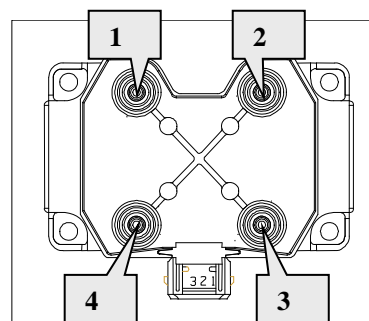

RIF.2

KIA
0K011-18-100

