

FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

micronAir®

Chevrolet Aveo II, Trax, Cruze, Malibu,
 Opel Mokka Vauxhall Mokka

Chevrolet

Aveo Schrägheck	II	03.11 ->
Aveo Stufenheck	II	03.11 ->
Cruze		03.09 ->
Malibu		01.12 ->
Orlando		03.11 ->
Trax		05.13 ->
Volt	II	10.11 ->

80001185
 CP1335
 MP 366

80001186
 CC1335
 MC 866


Opel

Ampera		10.11 ->
Astra	J	01.10 ->
Astra Sports Tourliner	J	11.10 ->
Cascada		02.13 ->
Insignia		07.08 ->
Karl		05.15 ->
Meriva	B	05.10 ->
Mokka		10.12 ->
Zafira Tourer		10.11 ->

49408842
 CB1335
 BL866

Saab

9-5	II	11.10 ->
-----	----	----------

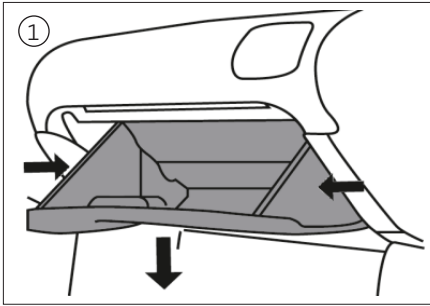

Astra J, Cascada, Insignia, Zafira C, Meriva

