


FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 INSTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

micronAir®

Audi	Q7	03.06 ->		21653020
Porsche	Cayenne 955	09.02 ->	02.10	CP1125
Volkswagen	Amarok	01.10 ->		MP141
Volkswagen	Bus T5	05.03 ->		
Volkswagen	Bus T6	04.15 ->		21653015
Volkswagen	California T5	05.03 ->		CC1125
Volkswagen	Caravelle T6	04.15 ->		MC641
Volkswagen	Multivan T5	05.03 ->		
Volkswagen	Touareg	10.02 ->	04.10	49408539
Volkswagen	Transporter T5	05.03 ->		CB1125
Volkswagen	Transporter T6	04.15 ->		BL641

Porsche Cayenne / VW Touareg

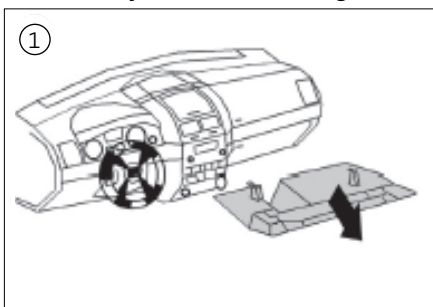



③

10.000 KM
6.200 M

½ yearly*

*according to VDI 6032

VW T5

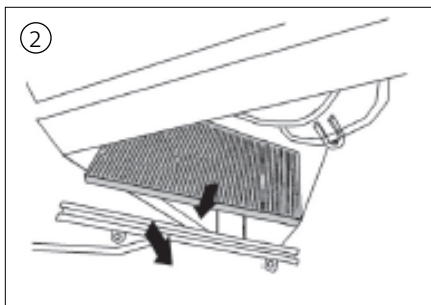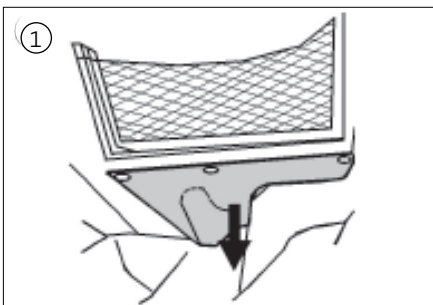

③

10.000 KM
6.200 M

½ yearly*

*according to VDI 6032