

E

INSTRUCCIONES DE MONTAJE

Para instalar correctamente el elevallas, haga lo siguiente:

- Desmonte el panel puerta con cuidado y extraiga el antiguo elevallas, debe desconectarlo mecánicamente y eléctricamente.
- Del elevallas viejo, es necesario sacar el motorreductor y aplicarlo en la misma posición al mecanismo nuevo.
- Introduzca el elevallas de recambio en la puerta en el espacio específico "1".
- Fijar el bloque del motor en los puntos (B).
- Enganchar las guías de ajuste "R" en los puntos (C) y la abrazadera de fijación al vidrio.
- Conectar eléctricamente el elevallas.
- Comprobar el funcionamiento general. Volver a montar el panel de la puerta.

Gracias por haber elegido nuestros productos.


GB

ASSEMBLY INSTRUCTIONS

To install the window regulator:


- Carefully disassemble the door: disconnect the old window regulator mechanically and electrically and remove it.
- Remove the gearmotor from the old window regulator and place it in the same position in the new one.
- Place the new regulator in the door through the opening "1".
- Attach the motor block at points (B).
- Attach the guide of regulation "R" at points (C) and the fixation rail.
- Connect the window regulator to the car's electrics.
- Check overall functioning. Reassemble the door.

Thank you for choosing our products.

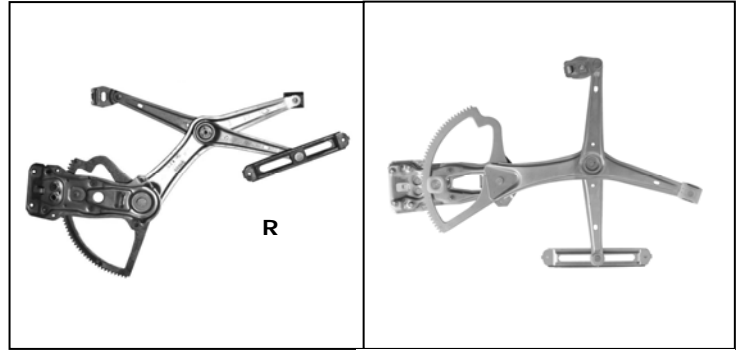

Elevalunas original
Oem window regulator

Nuestro elevalunas
Our window regulator

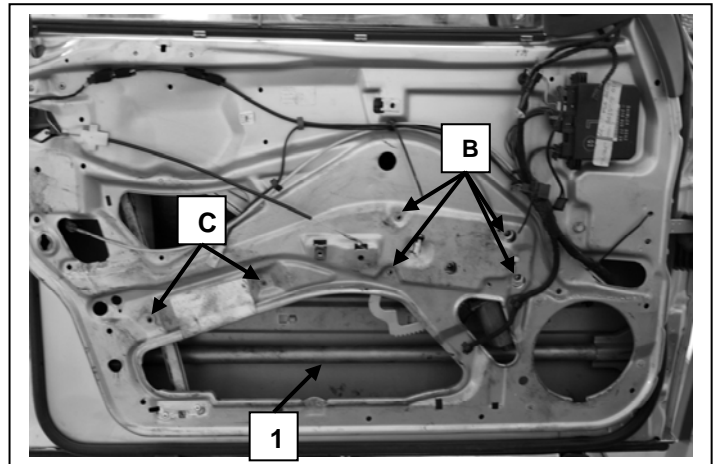

Puerta lado derecho, Right front door