




**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724**

**Instrucciones de montaje de juego de cables
eléctricos para gancho de remolque con caja de
conexiones 12-N según norma DIN/ISO 1724**







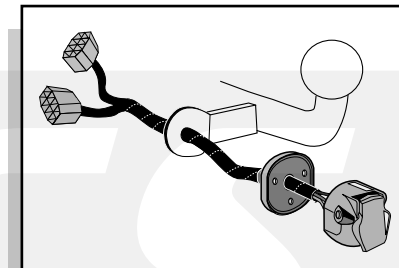










**AUDI A6 SEDAN 1997- + 2002-
With Check Control**


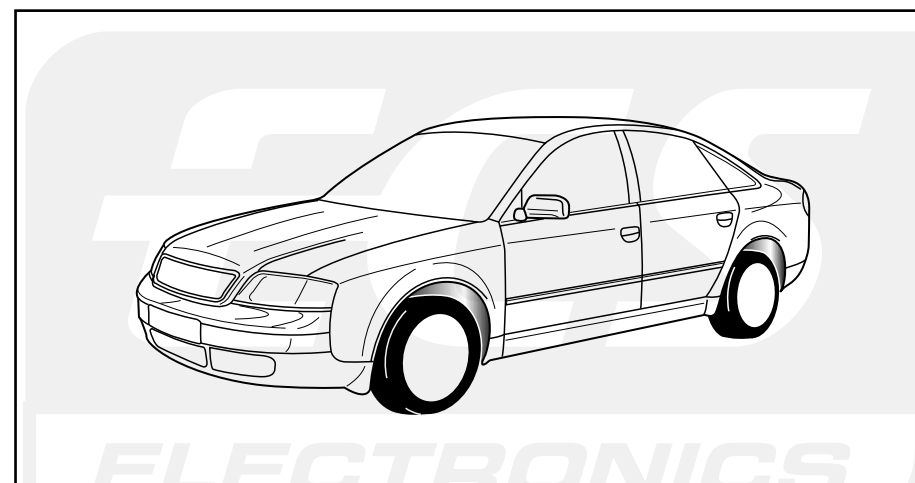


Bestel Nr.: AU-003-BB



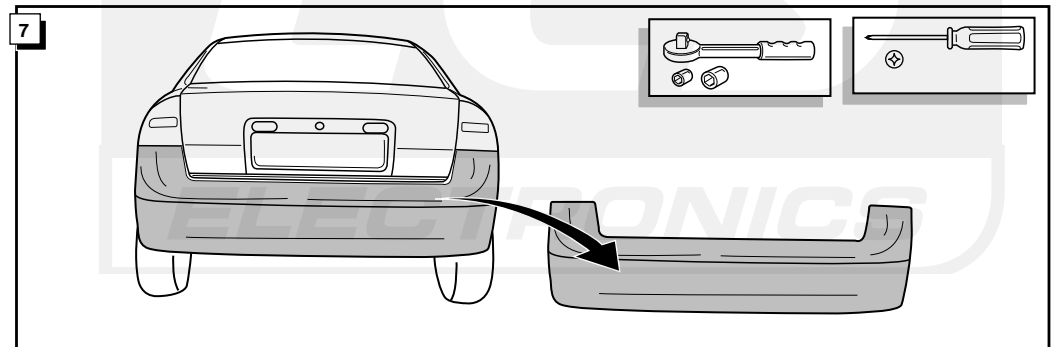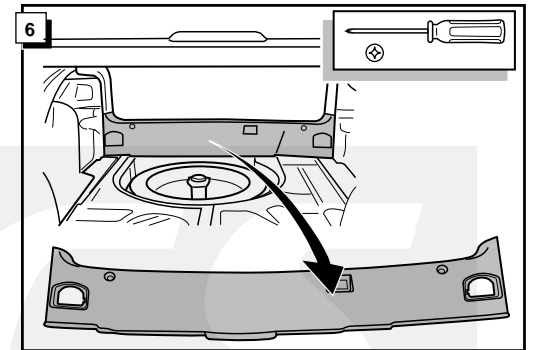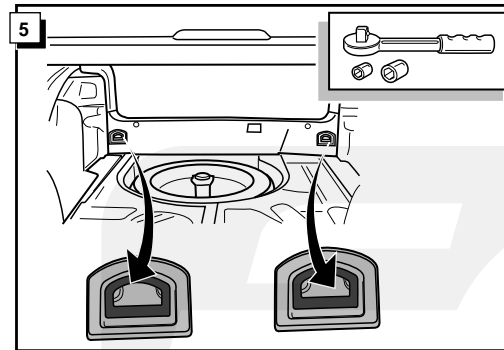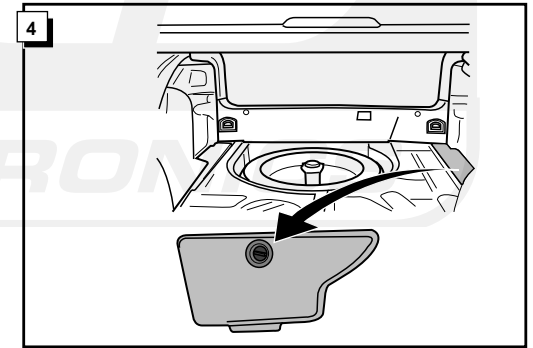
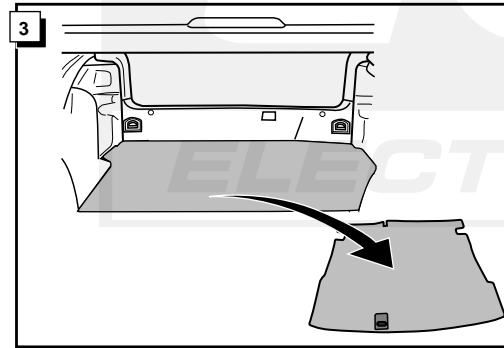
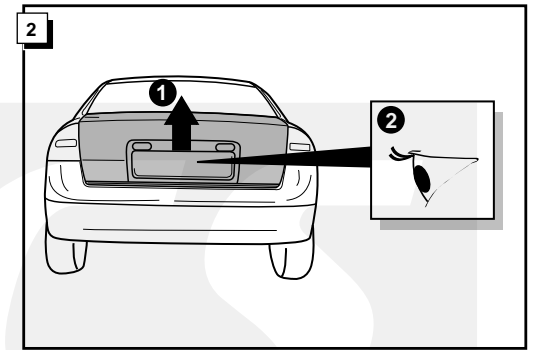
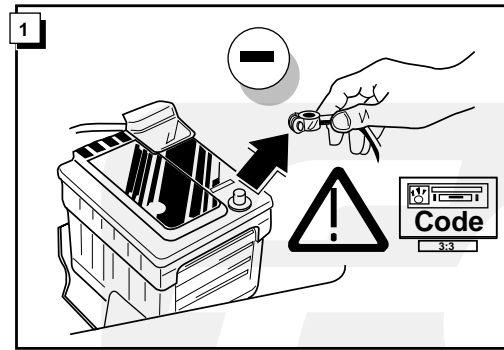


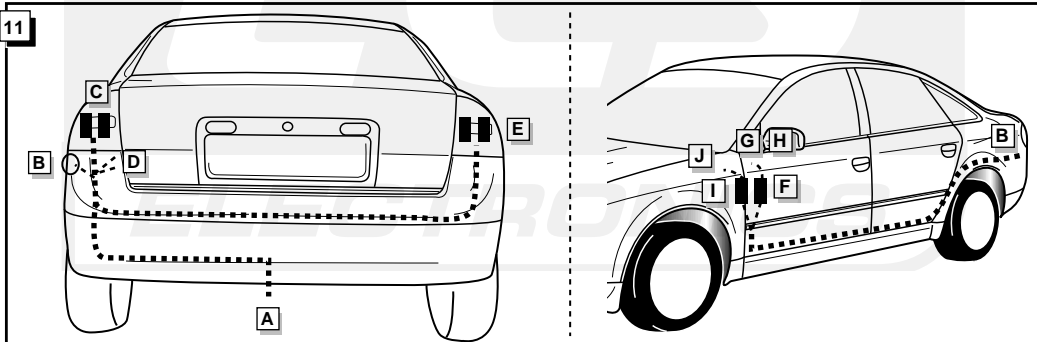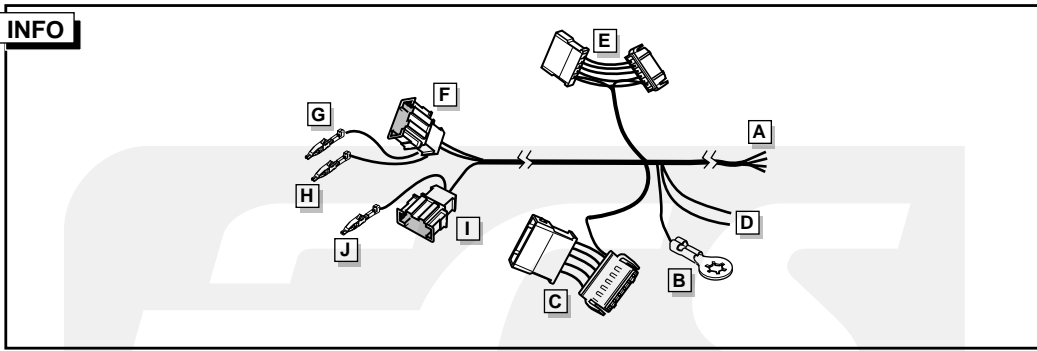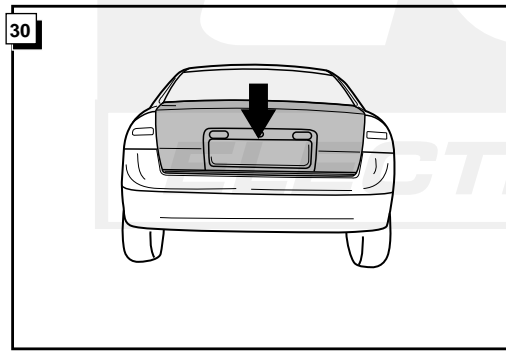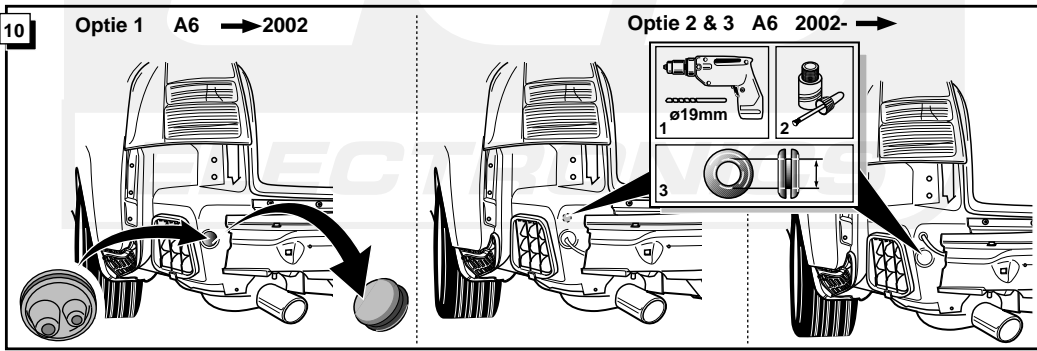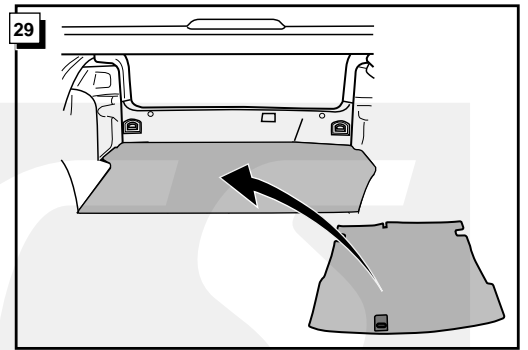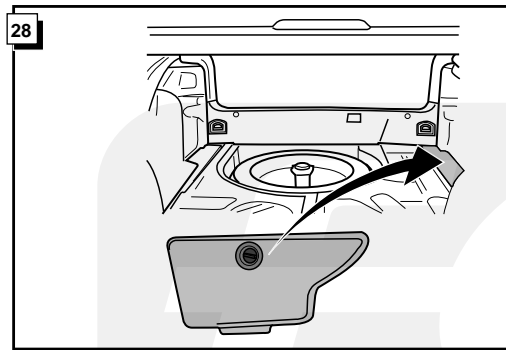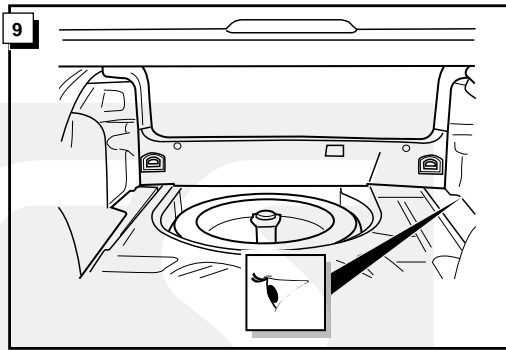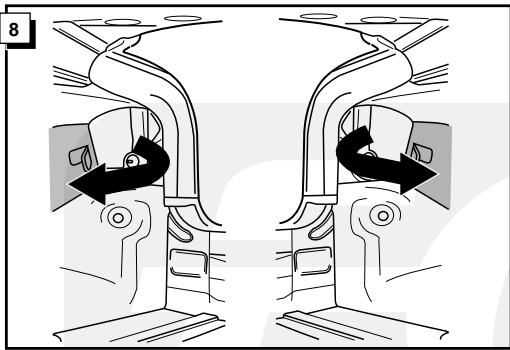

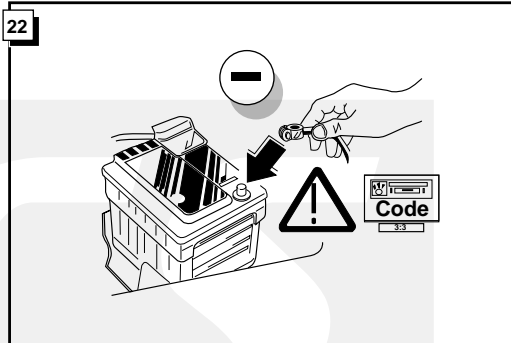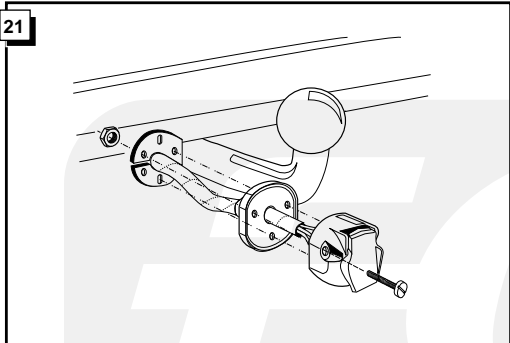

23

**! FUNKTIONEN KONTROLLIEREN !
 CONTRÔLER LES FONCTIONS !
 CHECK FUNCTIONS !
 CONTROLER FUNCTIES !
 CONTROLA LOS FUNCIONES!**

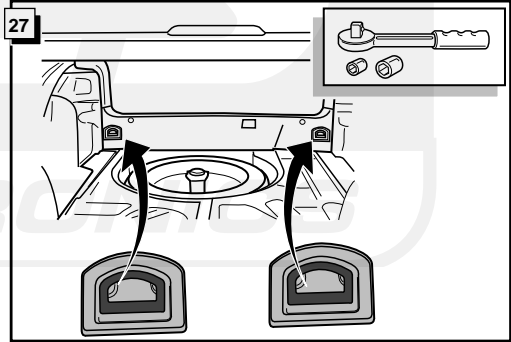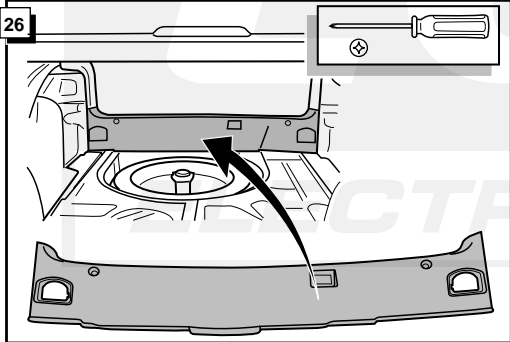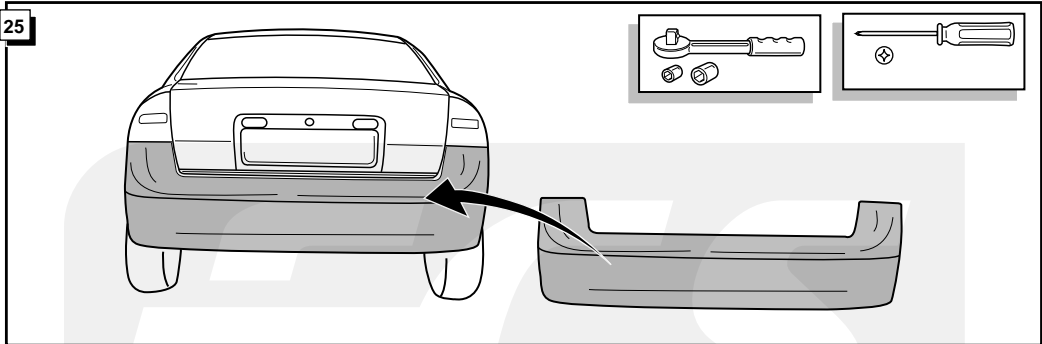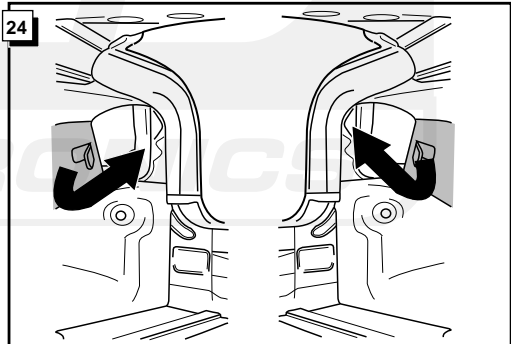

12

	GB	NL	D	FR	ES
1 = L	YELLOW	GEEL	GELB	JAUNE	AMARILLO
2 = 54-G	BLUE	BLAUW	BLAU	BLEU	AZUL
3 = 31	WHITE	WIT	WEIß	BLANC	BLANCO
4 = R	GREEN	GROEN	GRÜN	VERT	VERDE
5 = 58-R	BROWN	BRUIN	BRAUN	MARRON	MARRÓN
6 = 54	RED	ROOD	ROT	ROUGE	ROJO
7 = 58-L	BLACK	ZWART	SCHWARZ	NOIR	NEGRO
8 = 58-B	GREY	GRIJS	GRAU	GRIS	GRIS

L.H. INDICATOR
 KNIPPERLICHT LINKS
 BLINKER LINKS
 CLIGNOTANT GAUCHE
 LUCE DE DESTELLO IZQUIEDO

R.H. INDICATOR
 KNIPPERLICHT RECHTS
 BLINKER RECHTS
 CLIGNOTANT DROIT
 LUCE DE DESTELLO DERECHO

STOP
 BRAKELIGHTS
 REMLICHTEN
 BREMSLEUCHTE
 FEUX DE STOP
 LIQUEN FRENO

L.H. REARLIGHT
 ACHTERLICHT LINKS
 SCHLÜßLEUCHTE LINKS
 FEU ARRIERE GAUCHE
 LIQUEN ATRÁS IZQUIEDO

R.H. REARLIGHT
 ACHTERLICHT RECHTS
 SCHLÜßLEUCHTE RECHTS
 FEU ARRIERE DROIT
 LIQUEN ATRÁS DERECHO

EARTH
 MASSA
 MASSE
 MASSE
 TIERRA

