


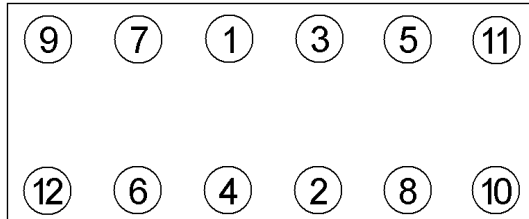
Anziehvorschrift für Zylinderkopf	187.710	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Fiat
		Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



152.760
M 12x1,25x218



Anziehen/ Tightening/ Serrage/ Apriete	*	Fiat: 20 Nm 65 Nm	*	Lancia: 65 Nm
	➤	90°	➤	90°
	➤	90°	➤	90°
	➤	90°	➤	90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

83 mm Ø 1,80 mm ± 2 Löcher

Mot: 182.A2.000, 838.A3.000, 838.A7.000
2,4 TD

Marea ab 1996 →
Kappa 07/1996 → 10/2001

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

187.710